

Condensing Dryer user manual



This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at www.samsung.com/register



features

1. Super capacity

Ultra drying capabilities are at your fingertips! Now you can dry extra-large loads. Our large 8kg capacity dryer circulates more air through your clothes, drying them faster, for a wrinkle-free result.

2. Visible water tank indicator

For the first time in the industry, users can see the water level of the water tank through the transparent scale panel, without having to open the water tank.

3. Sensor drying (fully automatic drying)

By adopting humidity and temperature sensors, the operating time and energy usage is controlled using digital technology.

4. Interior lamp

The interior lamp allows the easy viewing of the interior even when it is dark.

5. Rack drying

This is a low-temperature drying function developed to protect fragile fabrics from the tumbling process and to dry items such as sports shoes that cannot be dried by the tumble drying course.

6. Certificated wool course



M1006(Woolmark approval number).

The wool-mark certified course minimizes damage when drying wool clothes.

7. Reversible door for easier door opening at any location

Our dryers will fit just about anywhere and without a door conflict. The direction of our easy reversible door can be changed with simple handy work.

8. Diamond drum for fabric care

Samsung electronics' proprietary diamond-shaped drum offers excellent protection to your laundry.

9. High energy efficiency

Energy efficiency has been optimised to minimize unnecessary power consumption.

safety information

Congratulations on your new Samsung Dryer. This manual contains important information on the installation, use, and care of your appliance. Please take the time to read this manual to take full advantage of your dryer's many benefits and features.



WARNING - Risk of Fire

- Clothes dryer installation must be performed by a qualified technician.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, or operating your dryer.

Always contact your manufacturer about problems or conditions you do not understand.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

WARNING	Hazards or unsafe practices that may result in severe personal injury or death .
CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage .
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
	Do NOT attempt.
\mathbb{X}	Do NOT disassemble.
®	Do NOT touch.
*	Follow directions explicity.
3	Unplug the power plug from the wall socket.
=	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
\mathbb{Z}	Note
	Read operator's manual

safety information _3



This appliance is not intended for use by persons (including children) with reduced physical, sensory or wanning mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and warrung spread out so that the heat is dissipated.

4_ safety information



SEVERE WARNING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into an AC 220~240V/50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install or keep the product exposed to the outdoor elements.



Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified technician in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug after installation.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. See installation instructions for grounding this appliance.

safety information _5

satety information

SEVERE WARNING SIGNS FOR USING



Do not let children or pets on or into the product. In addition, when disposing of this product, disassemble the door lock (lever).

- This may result in children falling and injuring themselves.
- If children become locked in the product, there is a danger of suffocation.

Do not try to access the inside of the product when the drum is rotating.

Do not sit on the product or lean against the door.

- This may result in the product turning over and resulting in injury.

Dry the laundry only after it was spun by an appropriate washing machine.

Do not dry unwashed items in the tumble dryer.

Do not drink the condensed water.

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Do not dry laundry contaminated by inflammable materials such as gasoline, kerosene, benzene, thinner, alcohol, etc.

- This may result in electric shock, fire or explosion.

Do not let pets chew or play with the dryer.

- This may result in electric shock or injury.

When disposing of the product, separate the door and the power cord before disposing of the product.

- Failing to do so may result in damage to the power code or an injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.



Do not repair, replace, or attempt to service any part of the appliance unless specifically recommended in the user-repair instructions. You must also have the skills necessary to service this appliance.



Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service center.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

6_ safety information



A CAUTION SIGNS FOR USING



Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not touch the glass door and inside of the drum during or just after drying as it is hot.

This may result in burns.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

This may result in spontaneous combustion or ignition due to the heat of the oxidation of

Do not dry laundry containing forming rubber (latex) or similar rubber textures.

- If forming rubber is heated, it may start a fire.

Do not dry laundry contaminated by vegetable oil or cooking oil as a large amount of the oil will not be removed when washing the laundry. In addition, use the Cool Down cycle so that the laundry is not heated.

- The oxidization heat of the oil may start a fire.

Make sure that the pockets of all clothing to be washed are empty.

Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

Do not use softener or a static electricity remover unless recommended by the manufacturer.

- This may result in damage to the laundry.

Do not use the dryer near dangerous powders such as coal dust, wheat flour, etc.

- This may result in electric shock, fire or an explosion.

Do not place inflammable materials near the product.

- This may result in toxic gases from the product, damage to parts, electric shock, fire or an explosion.
- The appliance should not be placed behind lockable doors etc.



SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Clean the filter case before and after using the dryer.

Clean the inside of the product on a regular basis by asking an authorized service engineer.

Clean the condenser with water once a month.

The interior of the dryer should be cleaned periodically by qualified service personnel.

safety information _7

Tools needed for installation **INSTALLING YOUR DRYER** 9 See Dryer Exterior 10 Check before installing 10 Before using the product 10 Important to installer 10 Location considerations 10 Alcove or closet installation 11 Electrical requirements Grounding 11 12 Installation side by side 12 Final installation checklist 13 Draining water without using the water tank 13 Connecting the drain hose 15 Installation stacking 16 Door Reversal **OPERATING INSTRUCTIONS, TIPS** 18 Overview of the control panel 20 Child lock 20 Signal off My cycle 21 21 Delay End 21 Interior Lamp 22 Rack Dry 23 Load the dryer properly 23 Getting started CARE AND CLEANING 24 Clean the filter case 24 Clean the condenser 24 Control Panel 24 Tumbler 24 Stainless Steel Tumbler 24 Dryer Exterior 25 Dumping condensed water() 25 Cleaning the filter case() 26 Cleaning the condenser assembly **SPECIAL LAUNDRY TIPS** 27 Special laundry tips **TROUBLESHOOTING** 28 Check these points if your dryer... 30 Information codes **APPENDIX** 31 Fabric care chart Protecting the environment

32 Declaration of conformity

32 Specifications

Cycle chart 34 Consumption data

33

8_ contents

installing your dryer


TOOLS NEEDED FOR INSTALLATION

Hire a professional to install this dryer properly. If there is a service call performed as a result of poor setup, adjustment, and connection, it is considered the responsibility of the installer. If you install the dryer you are responsible.

Make sure you have everything necessary for proper installation (AC 220~240V/50Hz).

- 1. A GROUNDED ELECTRICAL OUTLET is required. See Electrical Requirements (See page 11).
- 2. CONDENSING SYSTEM Condenses, processes and circulates hot and humid air internally using an internal heat condenser.

SEE DRYER EXTERIOR

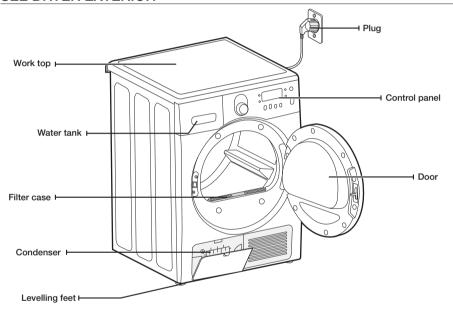

Parts Hose guide Cable tie Hose connector Long drain hose(2m) Manual book

installing your dryer _9

installing your dryer

CHECK BEFORE INSTALLING

- Do not plug the power cord into the wall outlet before completing the dryer installation.
- Check the appearance of the product for any damaged parts before starting the product installation.
- If there are any parts that appear to be damaged, please contact your nearest Samsung Customer Service Center.
- When moving the product, do not move the product by yourself.
- Take care of the edges of the dryer as they can be sharp.
- Do not install the dryer in a location exposed to frost. Cold water may damage the product.
- Use the product indoors only.
- Do not place the dryer on one side when lifting it, and do not move the dryer in such a way that the internal parts shake. This may result in damage to the internal parts of the product.

BEFORE USING THE PRODUCT

- Check if there are any accessories remaining inside the drum.
- Plug in the power cord just before operating the product.
- Do not block the air inlet hole of the cooling grill at the front of the dryer.
- Do not place inflammable objects near the dryer and keep the surroundings clean.
- Keep the dryer level with the ground.
- Do not remove the adjustable levelling feet of the dryer. They are necessary to keep the product level with the ground.

IMPORTANT TO INSTALLER

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.



REMOVE THE DOOR FROM ALL DISCARDED APPLIANCES TO AVOID THE DANGER OF A CHILD SUFFOCATING.

LOCATION CONSIDERATIONS

Because a condensing type has been adopted, which condenses and processes air inside the dryer, external ventilation is not required.

Therefore, The dryer can be installed and used in any location where the temperature is between 5 and 35 degrees centigrade, unlike a conventional dryer that requires an external exhaust system.

ALCOVE OR CLOSET INSTALLATION

To operate safely and properly, your new Dryer requires minimum clearances of:

Sides - 25 mm

Rear - 51 mm

Top - 25 mm

Front - 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening.

10_ installing your dryer

ELECTRICAL REQUIREMENTS



Electrical Requirements is AC 220~240V/50Hz.



- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer - if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, It is your responsibility to provide adequate electrical services for your dryer.

GROUNDING

Your dryer must be grounded. If your dryer malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your dryer comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock. Check with a qualified electrician or serviceman if you are unsure if the dryer is properly grounded. Do not modify the plug provided with the dryer. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.



If the product is not grounded, there is a danger of fire or electric shock.

installing your dryer _11


installing your dryer

INSTALLATION SIDE BY SIDE

For proper installation, we recommend that you hire a professional. To install:

- Move your dryer to an appropriate location for installation. Consider installing the dryer and washer side-by-side. Lay two of the carton cushion-tops on the floor. Tip your dryer on its side so it will lay across both cushion-tops.
- 2. Set your dryer back in an upright position.
- 3. To ensure that the dryer provides optimal drying performance, it must be level. To minimize vibration, noise, and unwanted movement, the floor must be a perfectly level, solid surface.
- \mathbb{Z}

To set the dryer to the same height as the washer, fully retract the levelling feet by turning them counterclockwise, then loosen the legs by turning them clockwise

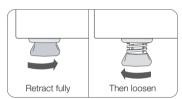





Adjust the levelling feet only as much as necessary to level the dryer. Extending the levelling feet more than necessary can cause the dryer to vibrate.

- Review Electrical Requirements section (See page 11). BEFORE OPERATING OR TESTING.
- 5. With a level, check your dryer and make necessary adjustments to the levelling legs.
- 6. Plug in your dryer, and check operation by using the checklist below.

FINAL INSTALLATION CHECKLIST

- ☐ Dryer is plugged into electrical outlet and is properly grounded.
- ☐ Dryer is leveled and is sitting firmly on the floor.
- ☐ Start your dryer to confirm that it runs, heats, and shuts off.

DRAINING WATER WITHOUT USING THE WATER TANK

You can use the dryer without using the water tank by following the procedures below.


CONNECTING THE DRAIN HOSE

The Dryer can pump the condensed water outside of the DRYER directly with dain hose provide.


The procedures to connect the drain hose are as follows.



1. Disconnect the drain hose

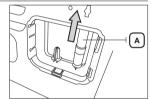


2. Connect the drain hose (A) to the other hole.

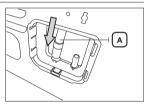

3. Connect accessory hose(long drain hose) B to the hole next to the hole that is connected to drain hose A.



- When connecting hose B, take care that the height of the hose does not exceed 90cm.
- After connecting the drain hose, you can directly drain the condensed water via the drain-outlet through the connected drain hose or through the washstand or the drain-outlet of the washstand.

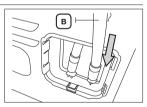


installing your dryer _13

installing your dryer

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed lower than 90cm. If the end of the drain hose needs to be placed above the ground, we recommend a height of 60cm ~ 90cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

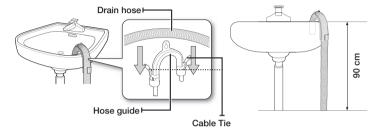

- 2. Assemble the drain hose and the hose guide and fix them with the cable-tie.
- You can drain the condensed water by connecting the accessory hose (long drain hose) to the drain-outlet directly.


Connecting the direct-hose

You can immediately drain the condensed water that comes out while drying, by connecting the drain hose to the tap.

1. Assemble the hose connector and the hose.



Since there is a danger of water leaking from the hose connecter and accessory hose, make sure that they are connected firmly.

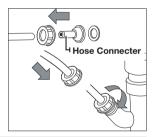

2. Connect the end of the hose to the tap.




14_ installing your dryer

INSTALLATION STACKING




In case of purchasing the additional stacking kit, contact our Samsung service center or local distributers. [Part no. SK-DH / SK-DA]

1. Carefully lay the dryer on its side. Use the packing material so you don't scratch the finish on the dryer.

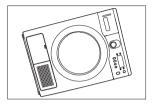

- 2. Install rubber pads to dryer base.
 - Locate the 4 rubber pads in the parts package. Insert the rubber pads into the holes at the bottom of the levelling legs.
 - · Purchase the stacking-kit package additionally.

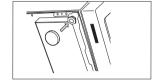

3. Set the dryer upright.




The stacking kit can only be installed for Samsung family products.

- 4. Install bracket to dryer.
 - Remove washer top cap screw from the rearleft.
 Align left bracket holes with top cap screw hole on rear left of the unit and replace screw.

Leave screw loose so dryer hole alignment will be easier.




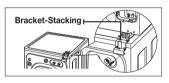

- 5. Install dryer and bracket on washer
- \triangle

Lift the dryer on top of the washer. Protect the washer control panel with cardboard or other protection. Be sure to lift the dryer high enough to clear the washer control panel.

Personal Injury. More than two people are recommended to lift the dryer into position because of its weight and size. Failure to do so could result in injury.

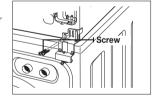


- Align the holes in the bracket with the holes in the back of the dryer. Using a Phillips screwdriver, attach the M4x12 tapping screws.
- Tighten the washer bracket screws; then tighten all stacking kit screws.
- 6. Finalise the installation



- Refer to the washer Installation Instructions to complete the washer installation.
- Refer to the dryer Installation Instructions to complete the dryer installation.
- Carefully slide or walk the stacked washer and dryer into place. Use felt pads or other sliding device to assist moving and to protect flooring.



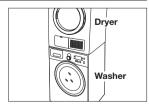

installing your dryer _15

installing your dryer


DOOR REVERSAL

Depending on your requirements (installation location, space constraints), you can change the direction the door opens.



This is done according to the customer's needs. The qualified technician or customer can do this themselves directly.

- 1. Unplug the power cord.
- 2. Remove the two screws from the door-hinge.
- 3. Lift the door to separate it.

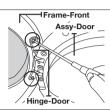


4. Remove the 16 screws.



After removing the screw, rotate the holder-glass, the door-glass, and the cover-door (I) by 180° as shown in the figure.



- Since the holder-glass, the door-glass, and the cover-door (I) are not completely fixed, rotate them holding the lower part so that they are not separated.
- Work carefully so that the door-seal is not removed.

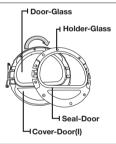

6. After rotating them by 180°, hold them in the position as shown by the figure.




7. Assemble the glass-holder in the correct direction. (After the disassembly, assemble it by rotating it by 180°.)



16_ installing your dryer

- 8. Fasten the 16 screws in the correct positions.
- 9. Note that two of the screws have a different length from the others. (Use the longer screws for the door-lever.)

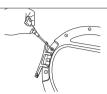

10. Move the position of the screw at the back of the door-hinge.



11. Fasten the screw in the bottom hole.




- 12. Remove the two screws holding the front-frame at the left.
- 13. Remove the two screws holding the holder-lever at the left.



14. Now, move to the right side of the product and fasten the two screws holding the front-frame and the two screws holding the lever-holder.



- 15. Align the door with the fixing holes.
- 16. Fasten the two screws holding the door-hinge.

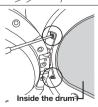


You can restore the direction the door opens by following the procedures above, if necessary.

installing your dryer _17

operating Instructions, tips

OVERVIEW OF THE CONTROL PANEL

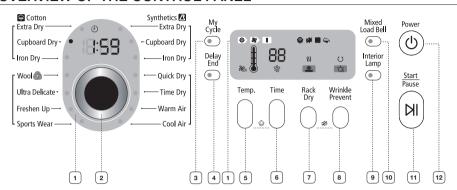

Digital Graphic Display

Displays the remaining drying cycle time, all cycle information, and error messages.

To select a cycle, rotate the Cycle Selector dial to the desired cycle. [Cottons] Cupboard Dry \rightarrow Extra Dry \rightarrow [Synthetics] Extra Dry \rightarrow Cupboard Dry \rightarrow Iron Dry \rightarrow Quick Dry \rightarrow Time Dry \rightarrow Warm Air \rightarrow Cool Air \rightarrow Sports Wear \rightarrow Freshen Up \rightarrow Ultra Delicate \rightarrow Wool \rightarrow [Cotton] Iron \rightarrow Cupboard Dry

Cotton - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

- Extra Dry Use for heavy-duty fabrics or items that should be very dry, such as jeans and towels.
- Cupboard Dry Use this cycle to dry loads such as cotton, underwear, and linen (NOT appropriate for jeans).
- Iron Dry Finishes the dry cycle in a moist state appropriate for Ironing.

Synthetics - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

- Extra Dry Use for heavy-duty fabrics or items that should be very dry, such as jeans and towels.
- Cupboard Dry Use this cycle to dry loads such as shirts, blouses, bed linen and table linen. (NOT appropriate for jeans).
- Iron Dry Finishes the dry cycle in a moist state appropriate for Ironing.

Quick Dry - Provides a 29 minutes drying time and high temperature level is automatically selected.

Time Dry - Time Dry allows you to select the desired cycle time and simultaneously it is possible to select the temperature level.

Turn the cycle selector dial to Time Dry, then press **Time** Button to set the drying time. Press the **Time** button repeatedly to scroll through the time settings. The drying time increase in every 10 minutes up to 90 minutes.

Warm Air - For small items, pre-dried laundry and normal fabrics using low temperature in 20 minutes.

Cool Air - For all fabrics to need freshing tumbles without heating.

Cycle Selector

18_ operating Instructions, tips

	Wool - For machine washable and tumble dryable wool only. Load should be under 1.0 kg. The Wool cycle of this machine has been approved by Woolmark company for Total-Easy-Care Wool products, M1006 (Woolmark approval number). Wool mark available models: SDC1A809 Ultra Delicate - The Delicates cycle is designed For lingeries at a low drying temperature. Freshen Up - With this cycle the odors can be removed and especially this cycle freshens garments. Sports Wear - Use for water-proofed or proofed garments to keep their good looks and fresh feel (except Gore-Tax). For better drying results, turn the laundry inside out before drying it. Overloading the dryer may not yield the same results. For the Max Load of each drying course, refer to the Cycle Chart in the appendix.
My Cycle Selection Button	Choose your favorite cycle including cycle, temp, Drying level option, etc. (See page 21 for detail.)
Delay End Selection Button	Press this button repeatedly to cycle through the available Delay End options (from 4 hours to 19 hours in one hour increments). The hour displayed indicates the time when the dry cycle will be finished.
Temp Selection Button	Press this button repeatedly to cycle through the available temperature level for the drying.
6 Time Selection Button	When using Manual Dry cycles, time can be adjusted by pressing the Time Selection button. 20min→30min→40min→50min→60min→70min→80min→90min During the Sensory Dry cycle, the time indicator of manual is off because exact drying times are determined by fluctuating humidity levels.
Rack Dry Selection Button	Rack Dry is available only at time dry cycle. Temperature will be set only to Low. (page 22 for detail.)
8 Wrinkle Prevent Selection Button	Wrinkle Prevent provides approximately 60 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press the Wrinkle Prevent button to activate this feature. The indicator light above the pad will illuminate when Wrinkle Prevent is selected. Dried laundry is prevented from becoming wrinkled by periodic drum rotations after the completion of the drying course. (Even after "End" is displayed, the drum rotates intermittently.)
9 Interior Lamp Selection Button	Lights the dryer drum while the dryer is running. It can be set while your dryer is not only running but also when it is stopped. If you do not turn the Drum Light off within 4 minutes of turning it on, it is automatically turned off.
Mixed Load Bell Selection Button	This is an alarm that notifies the user when the average drying level is damp dry (80% dried) when the laundry contains various types of materials and fabric. If the corresponding condition is satisfied, the Mixed load bell LED blinks.
Start/Pause selection button	Press to start a dry cycle. If the dryer is running, press it once and it will pause the dryer. Press it again to restart the dry cycle.
12 Power button	Press once to turn your dryer on, press again to turn it off. If your dryer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

operating Instructions, tips _19

operating Instructions, tips

CHILD LOCK

A function to prevent children from playing with your dryer.


Activating/Deactivatin

If you want to activating/deactivatin the Child Lock, press both the **Temp.** and **Time** buttons simultaneously for 3 seconds.

The "Child Lock @" will be lit when this feature is activated.



- When the power is turned on, the Child Lock function is available.
- Once you set the Child Lock function, no button, except for the **Power** button, will respond until you release the Child Lock function.
- If the dryer is powered on again, the Child Lock function stays on.
- When other buttons, except for the **Power** button, do not respond, check the Child Lock indicator to see if the function is on.

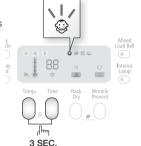


SIGNAL OFF

The Signal Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivatin

If you want to activate or deactivate the Signal Off function, press the **Rack Dry** and **Wrinkle Prevent** buttons at the same time for 3 seconds.

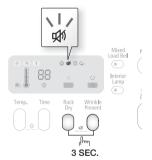

20_ operating Instructions, tips

MY CYCLE

Lets you activate your customised cycle that includes Dryness, drying temperature and time option. By pushing the **My Cycl**e button, you activate the settings used during the previous My Cycle mode. (Default: Normal Cycle)

If My Cycle mode is activated, the My Cycle indicator will be lit.

You can select all options in My Cycle mode as follows.

- 1. Select cycle using the Cycle Selector dial.
- 2. After cycle selection, set each option.
- Each cycle has certain default options that are automatically set. To see these default options, go to page 33.
- 3. Then, you can start My Cycle by pushing the **Start/Pause** button in My Cycle mode. The cycle and options you select will be displayed the next time you choose My Cycle.



DELAY END

You can set the dryer to finish your drying cycle automatically at a later time, choosing a delay of between 4 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the dry will be finished.

- 1. Manually or automatically set your drying machine according to the type of laundry you are drying.
- Press the **Delay End** button repeatedly until the required delay time is set. If the delay time is set, the "Delay End" function becomes ON state.
- 3. Press the **Start/Pause** button. The "Delay End 🕘" indicator will blink and the clock will begin counting down until it reaches the set time.
- 4. To cancel a Delay End function, press the Power button and then turn the dryer on again.

INTERIOR LAMP

Lights the dryer drum while the dryer is running.

Setting & releasing

If you want to set or release the Interior Lamp, press both the **Interior Lamp** buttons simultaneously.



This can be set as long as the power cord is connected to the wall outlet. If you do not turn the Drum Light off within 5 minutes of turning it on, it is automatically turned off.

operating Instructions, tips _21

perating Instructions, tips


RACK DRY

Installing the drying rack

- 1. Open the dryer door.
- 2. Position the drying rack in the tumbler, placing the front lip of the drying rack on the top of the lint filter case.
- 3. Place the rear legs in the two recessed areas of the dryer's back wall then push down the middle of the drying rack to fix.
- 4. Place the items to be dried on the rack, leaving space between them so air can circulate.
- 5. Close the dryer door.
- 6. Press the Power button.
- 7. Select Time Dry by using the cycle selector dial, set the time and then press the Rack Dry button.



- You can set a drying time up to 90 minutes. The temperature setting is automatically set to Low and cannot be changed. Select the time according to the moisture and weight of the items. Start dryer. It may be necessary to reset the timer if a longer drying time is
- If do not select Time Dry cycle, Rack Dry function is not selected.
- 8. Press the Start/Pause button.

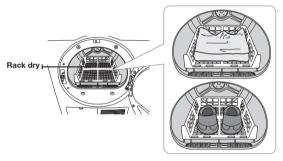

SUGGESTED ITEMS	REMARKS (MAX 1.5kg)		
Washable sweaters (block to shape and lay flat on rack)			
Stuffed toys (cotton or polyester fiberfilled)	When drying the laundry using the Rack, fold and place the clothes on the Rack to prevent the clothing from		
Stuffed toys (foam or rubber-filled)	becoming wrinkled.		
Foam rubber pillows			
Sneakers	To dry sports shoes, place the shoes on the Rack so that the soles of the shoes are facing downwards.		



↑ Drying foam rubber, plastic, or rubber on a heat setting may cause damage to the items MARNING and lead to a fire hazard.



Since damage may result when drying shoes, use the Rack Dry course to dry shoes.

22_ operating Instructions, tips

LOAD THE DRYER PROPERLY

- · Place only one washload in your dryer at a time.
- Mixed loads of heavy and lightweight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying.
 This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.
- Make sure to insert laundry that has been spun by an appropriate washing machine.
- No unwashed textiles should be dried
- Textiles which have been in contact with oil, alcohol, petrol etc. should not be dried.

GETTING STARTED

- 1. Load your dryer loosely DO NOT overload.
- 2. Close the door.
- 3. Select the appropriate cycle and options for the load (see pages 20, 21).
- 4. Press the Start/Pause button.
- 5. The dryer indicator light will illuminate.
- The estimated cycle time will appear in the display.The time may fluctuate to better indicate drying time remaining in the cycle.



- When the cycle is complete and "End" will appear in the display.
- Pressing Power cancels the cycle and stops your dryer.
- The Drying, Cooling, and Wrinkle Prevent indicator lights will illuminate during those portions of the cycle.

operating Instructions, tips _23

CLEAN THE FILTER CASE

- After each load.
- To shorten drving time.
- To operate more energy efficiently.



Do not operate your dryer without the filter case in place.



There is a danger of damaging the laundry when drying laundry without the filter case.

CLEAN THE CONDENSER

- Clean once a month
- Clean with water



If you do not clean it for a long time, the drying performance may be degraded.

CONTROL PANEL

Clean with a soft, damp clothes. Do not use abrasive substances.

Do not spray cleaners directly on the panel.

The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.

Apply such products away from your dryer and wipe up any spills or overspray immediately.

TUMBLER

Remove any stains such as crayon, ink, or fabric dve (from new items such as towels or jeans) with an allpurpose cleaner.

Tumble old towels or rags to remove any excess stain or cleaning substance.

Once these steps are followed, stains may still be visible, but should not transfer to subsequent loads.

STAINLESS STEEL TUMBLER

To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.

Remove the cleaner residue and dry with a clean cloth.

DRYER EXTERIOR

The entire dryer has a high-gloss finish. Clean with a soft, damp cloth. Do not use abrasive substances. Protect the surface from sharp objects as they may scratch or damage the finish.

Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.


24_ care and cleaning

DUMPING CONDENSED WATER(~)

1. Pull the water-tank forwards to separate it.




When removing the Water tank from the product, hold it using both hands as it is heavy and take care not to spill any water inside the tank.

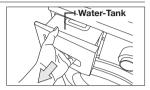

- 2. Remove the condensed water inside the water-tank.
 - Remove the condensed water in the tank after every drying operation.



Since there is a danger of water leaking if you do not drain the water after using the product, make sure to drain the water.

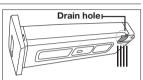


Ø

If you empty the water tank and press the Start button, the Water Tank Full (🖘) in the LED panel is turned off.

CLEANING THE FILTER CASE(III)

1. Open the door and remove the filter by pulling it upwards.

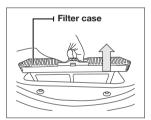

- 2. Open and clean the filter case.
 - Clean the filter case after the drying operation is completed.





- Since the drying performance may be degraded and there is a danger of fire if you do
 not clean the filter case after the specified period of use, clean the filter case at the
 specified cleaning interval.
- Since the drying performance may be degraded and there is a danger of fire if you use a damaged or broken filter case, replace the filter case in this case.
- Clean the filter case after every drying operation.




- If the surface of the filter is wet, use the filter after drying it completely.
- If you clean the filter case and press the Start button, the Filter () in the LED panel is turned off.

care and cleaning _25


care and cleaning

CLEANING THE CONDENSER ASSEMBLY

 $\textbf{1.} \ \ \text{Open the condenser compartment cover}.$

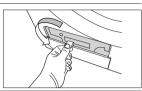

2. Unlock the fixer condenser.

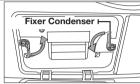

3. Remove the condenser.



 Clean the condenser completely under the tap letting water to flow through.





- Since the drying performance may be degraded if you do not clean the condenser after a specified period of use, clean the condenser at the specified cleaning interval.
- · Clean it once a month.
- When assembling the condenser after cleaning it, make sure to that the fixer condenser is set to the lock position.

26_ care and cleaning

special laundry tips

SPECIAL LAUNDRY TIPS

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

Bedspreads & Comforters	 Follow the care label instructions or dry on the Cotton cupboard and High temperature. Make sure the item is thoroughly dry before using or storing. May require repositioning to ensure even drying.
Blankets	 Use Cotton cupboard and dry only one blanket at a time for best tumbling action. Make sure the item is thoroughly dry before using or storing.
Cloth Nappies	Use the Cotton cupboard and the High temperature settings for soft, fluffy diapers.
Down-filled Items (jackets, sleeping bags, comforters, etc.)	Use the Cotton cupboard and the Low or Low temperature setting. Adding a couple of dry towels shortens drying time and absorbs moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	DO NOT dry on a heat setting. Use the Cool Air cycle (no heat). WARNING – Drying a rubber item with heat may damage it or be a fire hazard.
Pillows	 Use the Cotton cupboard. Add a couple of dry towels to help the tumbling action and to fluff the item. DO NOT dry kapok or foam pillows in dryer. Use the Cool Air cycle.
Plastics (shower curtains, outdoor furniture covers, etc.)	Use the Cool Air cycle or the Time Dry cycle and the Low or Low temperature settings depending on the care label instructions.

THINGS TO AVOID:

- Fiberglass items (curtains, draperies, etc.).
- Woolens, unless recommended on the label.
- · Vegetable or cooking oil-soaked items.

troubleshooting

CHECK THESE POINTS IF YOUR DRYER...

PROBLEM	SOLUTION
Doesn't run.	Make sure the door is latched shut. Be sure the power cord is plugged into a live electrical outlet. Check the home's circuit breaker and fuses. Press the Start/Pause button again if the door is opened during the cycle. Empty the water in the condensed water tank. Clean the filter case.
Doesn't heat.	 Check the home's circuit breaker and fuses. Select a heat setting other than Cool Air. Check the case filter and condenser and clean them if necessary. Dryer may have moved into the cool-down phase of the cycle.
Doesn't dry.	 Check all of the above, plus Do not overload. 1 wash load = 1 dryer load. Sort heavy items from lightweight items. Large, bulky items like blankets or comforters may require repositioning to ensure even drying. Check that the dryer is draining properly to extract adequate water from the load. Load may be too small to tumble properly. Add a few towels. Clean the filter case. Clean the Condenser. Check if the cooling air vent is blocked.
Is noisy.	Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly. Be sure the dryer is leveled properly as outlined in the installation instruction. It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum and fan.
Dries unevenly.	Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the Extra Dry setting if desired. If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Has an odour.	Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the tumbler, and exhausts it outside. When these odors linger in the air, ventilate the room completely before using the dryer.
Shuts off before load is dry	Dryer load is too small. Add more items or a few towels and restart the cycle. Dryer load is too large. Remove some items and restart the dryer.

28_ troubleshooting

PROBLEM	SOLUTION
Lint on clothes	Make sure the lint filter is cleaned before every load. With some loads that produce high amounts of lint, it may be necessary to clean the filter case during the cycle.
	Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of black linen pants)
	Divide larger loads into smaller loads for drying
	Check pockets thoroughly before drying and drying clothes.
Garments still wrinkled after	Small loads of 1 to 4 items work best.
Wrinkle prevent	Load fewer garments.Load similar-type garments.
Odours remain in clothing after Refresh.	Fabrics containing strong odors should be washed.

troubleshooting

INFORMATION CODES

Information codes may be displayed to help you better understand what is occurring with your Dryer.

ERROR DISPLAY	MEANING	SOLUTION
tE2	Clogged filter case is restricted.	Clean the filter case or condenser.
tE4		If the problem continues call for service.
dE	Running the dryer with door open	Close the door and then restart. If the problem continues call for service.
dF	Door is not closing properly	Call for service.
bE	Button stuck for more than 30 secs	Make sure a button is NOT being pressedcontinuously. Try restarting the cycle. If the problem continues, call for service.
hE	Clogged filter case is restricted. Invalid heating Temp when running the dryer.	Clean the filter case or condenser. If the problem continues call for service
Et	EEPROM is not communicating properly	Try restarting the cycle.lf the problem continues call for service.
3E	The motor does not work properly.	Try restarting the cycle.If the problem continues call for service.
5E	The water tank is full of water. The drain pump is out of order.	Empty the water tank and start again. If the problem continues call for service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

30_ troubleshooting



FABRIC CARE CHART

The following symbols provide garment care direction. The Clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		Specia	I Instructions	Warnin Launde	g Symbols for ering
	Normal		Line Dry/ Hang to Dry	₩	Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control	III	Drip Dry	>¢	Do Not Wring
\square	Gentle/Delicates	⊟	Dry Flat	*	Do Not Bleach
	Hand Wash	Heat S	etting	₽	Do Not Tumble Dry
Water -	Temperature**	·	High		No Steam (added to iron)
•••	Hot	·	Medium	A	Do Not Iron
•• Warm		O Low		Dryclean	
•	Cold	0	Any Heat	0	Dry Clean
Bleach			No Heat/Air	8	Do Not Dry Clean
	Any Bleach (when needed)	Iron-Dr Tempe	y or Steam ratures		Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)	<u></u>	High	III	Drip Dry
	Tumble Dry Cycle	<u>_</u>	Medium	⊡	Dry Flat
Normal		<u>a</u>	Low		
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control				
	Gentle/ Delicates				

^{**} The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is $41^{\circ} - 52^{\circ}$ C, for Warm $29^{\circ} - 41^{\circ}$ C and for Cold $16^{\circ} - 29^{\circ}$ C. (Wash water temperature must be a minimum of 16° C for detergent activation and effective cleaning.)




PROTECTING THE ENVIRONMENT

This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

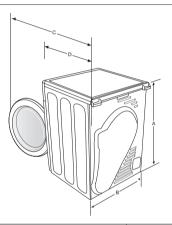

	TYPE	FRONT LOADING DRYER
DIMENSIONS	A. Height	84.8 cm
	B. Width	59.8 cm
	C. Depth with door open 90°	108.6 cm
	D. Depth	63.4 cm
WEIGHT		44.5 kg
HEATER RATING		2500 W (1750 W+750 W)
POWER CONSUMPTION	NO HEAT	175 W
	HEATING	2675 W
He drum illumination		LED(Different according to model)



To replace the LED illumination please contact our service line.

32_ appendix

CYCLE CHART

(• user option)

С	ycle	Max load(kg) (Dry Laundry)	Temp.	Time	Delay End	My Cycle	Mixed Load Bell	Interior Lamp	Wrinkle Prevent	Sound Off	Cooling Time (min)
	Extra Dry		High	134	•	•	•	•	•	•	5
Cotton	Cupboard Dry	8	High	119	•	•	•	•	•	•	5
	Iron Dry		High	99	•	•	-	•	•	•	5
	Extra Dry		Medium	59	•	•	•	•	•	•	5
Synthetics	Cupboard Dry	4	Medium	49	•	•	•	•	•	•	5
	Iron Dry		Medium	39	•	•	-	•	•	•	5
* Wool WOOLMARK APPRAIL CARL M1006(Woolmark		1	Low	27	•	•	-	•	•	•	1
Ultra Delica	te	1	Low	35	•	•	•	•	•	•	3
Freshen Up		1.5	High	30	•	•	-	•	•	•	5
Sports Wea	r	1.5	Low	50	•	•	•	•	•	•	5
Quick Dry		-	High	29	•	•	-	•	•	•	8
Time Dry	Time Dry		High	40	•	•	-	•	•	•	8
Warm Air		-	Low	20	•	•	-	•	•	•	5
Cool Air		-	N/A	20	•	•	-	•	•	•	

^{*} Depending on the percentage of wool in the laundry, the time may extend up to 43 minutes.



CONSUMPTION DATA

Program	Load(kg)*	Final spin speed In a domestic washing machine (Rpm)	Ener(kWh)	Duration (Minutes)
Cotton Cupborad	8	1000 (60% residual moisture)** 1400 (50% residual moisture)	4.49 4.18	119 110
Cotton Iron	8	1000 (60% residual moisture)** 1400 (50% residual moisture)	3.96 3.44	96 87

^{1. *:} Weight of dry laundry

Consumption data can vary from the nominal values given above depending in the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

^{** :} EN 61121:2005 test program

^{2.} All data without a "star" against it was calculated using EN 61121:2005

memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

Code No. DC68-02805J-04_EN

SDC1A809 SDC3K801



مجفف يعمل بالتكثيف دليل المستخدم



تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة «100.

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung. للحصول على خدمة أكثر تكاملاً. الرجاء تسجيل المنتج على الموقع

www.samsung.com/register



الميزات

۱. سعة قصوي

إمكانات جَفيف فائقة في متناول يديك! يمكنك الآن جَفيف ملابس بأوزان كبيرة جدًّا. حيث نوفر لك مجفف بسعة كبيرة تبلغ ٨ كجم يعمل على توزيع كمية كبيرة من الهواء عبر ملابسك مما يعمل على فجفيفها بشكل أسرع وبذلك فهو يقدم نتائج بدون

ا. مؤشر مرئى لخزان الماء

لأول مرة في عالَّم الصناعة. يمكن للمستخدمين رؤية مستوى الماء داخل خزان الماء من خلال لوحة قياس شفافة دون الحاجة إلى فتح

٣. مستشعر جمفيف (جمفيف تلقائي بالكامل)

باستخدام مستشعر درجة الحرارة والرطوبة. يحُّن التحكم في مدة التشغيل واستهلاك الطاقة باستخدام التكنولوجيا الرقمية.

مصباح داخلي
 يسمح المصباح الداخلي مشاهدة المحتويات الداخلية بسهولة عند الظلام.

د. رف التجفیف

يُعد وظيفة جَفيف بدرجة حرارة منخفضة تم تطويرها لحماية الأنسجة الرقيقة من الأضرار الناجّة عن عملية التدوير وجَفيف الأمتعة مثل الأحذية الرياضية التي لا يمكن فجفيفها بواسطة دورة التجفيف بالتدوير.

1. دورة صوف معتمدة



M1006 (رقم اعتماد شركة Woolmark).

تعمل دورة wool-mark المعتمدة على تقليل تلف الملابس الصوفية عند جُفيفها.

٧. باب قابل للانعكاس للفتح بسهولة في أي مكان

نقدم لك أجهزة جَفيف تناسب أي مكان وبدون حدوث تعارضٌ للباب. حيث يمكن تغيير الجاه الباب القابل للانعكاس سهل الفتح بحركة يدوية بسيطة.

٨. حاوية ماسية للعناية بالأقمشة

توفر الحاوية ماسية الشكل التي تقدمها شركة Samsung electronics حماية متازة للغسيل.

كفاءة عالية في استهلاك الطاقة

قمنا بتحسين كفاءة ٱستهلاك الطاقة لتقليل الاستهلاك غير الضروري للطاقة.

معلومات السلامة

تهانينا على شرائك "مجفف Samsung" الجديد. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة للمحفف.



تخذير - خطر حدوث حريق

- يجب تنفيذ تركيب مجفف الملابس بواسطة فني مؤهل.
- ويكون تركيب مجفف الملابس وفقًا لتعليمات الشُّركة المصنعة والضوابط الحلية.
- للتقليل من خطر حدوث إصابات خطيرة أو التسبب في الوفاة, اتبع كافة تعليمات التركيب.

ما يجب أن تعرفه حول إرشادات السلامة

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف الحُتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الجُعف وصيانته وتشغيله. للاستفسار حول المشاكل والظروف التي لا تستوعبها. اتصل بالشركة المضنَّعة للجهاز.

الرموز والاحتباطات الهامة للسلامة

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات جسدية بالغة أو الوفاة.	غذير
المارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات طفيفة للأفراد أو تلف الجفف.	تنبيه
لتقليل احتمال حدوث خطر الحريق أو الانفجار أو الصدمات الكهربية أو الإصابة الجسدية أثناء استخدام الغسالة, اتبع احتياطات السلامة الأساسية التالية:	تنبيه
منوع المحاولة.	
منوع الفك.	\boxtimes
منوع اللمس.	8
اتبع الإرشادات بعناية.	*
قم بفصل قابس التيار الكهربي من مقبس الحائط.	3 -
تأكد من توصيل الغسالة بأرضي لمنع حدوث صدمة كهربية.	=
اتصل بمركز الخدمة للمساعدة.	
ملاحظة	Ø
اقرأ دليل التشغيل	

معلومات السلامة ــــ٣

معلومات السلامة



★ لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم نقص في قدرات جسدية أو عقلية أو حسية (بما فيهم الأطفال) أو نقص في غير العرفة أو الخبرة, إلا خت إشراف أو توجيه فيما يخص استخدام هذا الجهاز من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.



🚣 لا نقم أبدًا بإيقاف الجُفف الدوار قبل انتهاء دورة التجفيف ما لم تتم إزالة الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

٤_ معلومات السلامة

🗥 علامات التحذير الصارمة الخاصة بالتركيب

🚖 🕽 يجب تركيب هذا الجهاز بواسطة فني متخصص أو شركة صيانة متخصصة.

قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض

قم بتوصيل سلك التيار الكهربي في مقبس حائط بجهد تيار متردد ٢٥٠-٢٥٠ فولت وتردد ٥٠ هرتز وشدة تيار من التيار المتردد أو أعلى واستخدم هذا المقبس لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.

- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تتطابق كل من الجهد الكهربي والتردد والتيار مع القياسيات الخاصة بمواصفات المنتج. يؤدي الفشيل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق. وكذلك الفشل في إدخال قابس التيار الكهربي في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة. مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.

- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول الأطفال. نظرًا لأنها قد تمثل خطورة على الأطفال.

قد يؤدى وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.



يجب توصيل الجهاز بالأرضي بشكل سليم.

- ولا تقم بتوصيل الجهاز بالأرضى بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد

لا تقم بتركيب الجهاز أو حفظه بحيث يكون معرضًا للعوامل الخارجية.



لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالف أو مقبس حائط غير مُحكم.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

فى حالة تلف قابس الجهاز (سلك التيار الكهربي). يجب تغييره من قبل الشركة المنتِّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأى خطر.

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.

يجب عدم لف سلك الطاقة أو طيه.

يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.

- يجب فصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- يؤدى الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

يجب توصيل الجهاز بأرضي بشكل سليم. ويجب عدم توصيل سلك التيار الكهربي بمقبس متصل بأرضي بشكل غير ملائم وغير متطابق مع القواعد الحلية والقومية. راجع إرشادات التركيب الخاصة بتوصيل هذا الجهاز بالأرضى.

معلومات السلامة ـــ٥

معلومات السلامة



🛕 علامات التحذير الصارمة الخاصة بالاستخدام



لا تضع الأطفال أو الحيوانات الأليفة فوق المنتج أو بداخله. بالإضافة إلى ذلك. قم بفك قفل الباب (دراع الإطلاق) عند التخلص من المنتج.

- قد يتسبب هذا الأمر في سقوط الأطفال أو إصابتهم.
- في حالة احتباس الأطفال داخل المنتج. فقد يتعرضوا للاختناق.

لا خَاول الوصول إلى ما بداخل المنتج أثناء دوران الحاوية.

لا خاول الجلوس فوق المنتج أو الاتكاء على الباب.

قد يتسبب هذا الأمر في انقلاب المنتج والتعرض للإصابة.

جفف الغسيل بعد جَفيفه بواسطة غسالة مناسبة فقط.

جَنب جَفيف الملابس غير المغسولة داخل الجفف الدوار.

لا تشرب الماء المتكثف.

لا تقم أبدًا بإيقاف الجفف الدوار قبل انتهاء دورة التجفيف ما لم تتم إزالة الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

يجب عدم فجفف الغسيل الملوث بمواد قابلة للاشتعال مثل الجاز أو الكيروسين أو البنزين أو الثنر أو الكحول أو ما إلى ذلك.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تدع الحيوانات الأليفة تمضغ الغسالة أو تعبث بها.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حدوث إصابة.

عند التخلص من المنتج. قم بفصل الباب وفك سلك التيار الكهربي قبل التخلص منه.

قد يؤدي عدم الالتزام بهذه التعليمات إلى تلف سلك التيار الكهربي أو حدوث إصابة.

لا تلمس قابس التيار الكهربي ويديك مُبتلة.

قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.



لا تقم بإصلاح أي قطعة من الجهاز أو استبدالها أو محاولة صيانتها ما لم يكن موصى بذلك في إرشادات الإصلاح. كما ينبغي أن



لا خَاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني. وما إلى ذلك) خلاف المنصهر القياسي.
 - عند الحاجة إلى إصلاح الجهاز أو إعادة تركيبه، اتصل بأقرب مركز صيانة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة. لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung. كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

1_ معلومات السلامة



🗥 علامات التنبيه الخاصة بالاستخدام



يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو الشمعدان المُضاء أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الأشياء المعدنية. وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو حدوث حريق أو مشاكل بالمنتج أو وقوع إصابات.

لا تقم بلمس الباب الزجاجي أو ما بداخل الحاوية أثناء التجفيف أو بعده مباشرة نظرًا لسخونته.

قد ينتج عن هذا الأمر الإصابة بحروق.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة مثل المسامير أو السكاكين أو الأظافر. وما إلى ذلك.

قد بنتج عن هذا الأمر حدوث صدمة كهربية أو حدوث إصابة.

يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل ملابس الغسيل أو شطفها أو تنشيفها في حالة تعلق مسحوق جاف للتنظيف بها.

قد يؤدي هذا الأمر إلى حدوث اشتعال فورى نتيجة للحرارة الناجّة عن تأكسد الزيت.

يحظر فِفيف الغسيل الذي يحتوي على مواد مطاطية (لاتكس) أو أقمشة مشابهة للمطاطية.

عند ارتفاع درجة حرارة المواد المطاطية. فقد تبدأ في الاشتعال.

لا تقم بتجفيف الملابس الملوثة بزيت نباتى أو زيت طعام نظرًا لتعثر إزالة كمية الزيت الكبيرة أثناء غسل الملابس. وبالإضافة إلى ذلك, قم باستخدام دورة Cool Down (التجفيف البارد) حتى لا ترتفع حرارة الغسيل.

قد تتسبب حرارة أكسدة الزيت في نشوب حريق.

تأكد من إفراغ كافة جيوب الملابس التي سيتم غسلها.

قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزودة بإبزمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

لا تستخدم منعم أقمشة أو مزيل كهربائي ثابت ما لم يكن معتمد من قَبل الشركة المسنَّعة.

قد يتسبب هذا الأمر في تلف الغسيل.

لا تستخدم الجفف بالقرب من المساحيق الخطيرة مثل تراب الفحم أو دقيق القمح أو ما إلى ذلك.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تضع المواد القابلة للاشتعال بالقرب من المنتج.

- قد يتسبب هذا الأمر في انبعاث غازات سامة من المنتج أو تلف أجزائه أو حدوث صدمة كهربية أو نشوب حريق أو انفجار.
 - ينبغى عدم وضع الجهاز خلف الأبواب القابلة للغلق أو ما إلى ذلك.



علامات التحذير الصارمة الخاصة بالتنظيف

يجب عدم تنظيف الجهاز عن طريق رش الماء فوقه مباشرةً. يجب عدم استخدام البنزين أو الثنر أو الكحول لتنظيف الجهاز.

قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

يؤدى الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

قم بتنظيف حاوية المصفاة قبل استخدام الجفف وبعد استخدامه.

نظف الأجزاء الداخلية للمنتج بانتظام عن طريق طلب المساعدة من مهندس صيانة معتمد.

قم بتنظيف المكثف بالماء مرة واحدة شهريًا.

يجب تنظيف الأجزاء الداخلية للمجفف بشكل دوري بواسطة فنى صيانة متخصص.

معلومات السلامة _٧

SDC1A809-02805.I-04 AB 20120621 indd Sec1:7 6/21/2012 1:47:13 PM

المحتويات

الادوات اللازمة للتركيب	٩	تركيب الجفف
نظرة حول السطح الخارجي للمجفف	٩	
الفحص قبل التركيب	1 -	4
إجراءات ما قبل استخدام المنتج	1 -	
تعليمات هامة للتركيب	1 -	
الاعتبارات المكانية	1.	
تركيب القنطرة أو الخزانة	1 -	
المتطلبات الكهربية	11	
التوصيل بالأرضي	11	
التركيب جانب بجانب	۱٢	
قائمة اختيار التركيب النهائية	15	
تصريف الماء بدون استخدام خزان الماء	11"	
توصيل خرطوم التصريف	11"	
تثبيت التركيب	10	
عكس الباب	11	
نظرة عامة على لوحة التحكم	1.6	إرشادات التشغيل، تلميحات
التأمين ضد عيث الأطفال	٢.	إرسادات التستين، للميتحات
ايقاف التنبيه الماف التنبيه	٢.	1 A
، ــــــــــــــــــــــــــــــــــــ	٢١) /\
رد- بــــــــــــــــــــــــــــــــــــ	٢١	, , ,
المصباح الداخلي المصباح الداخلي	٢١	
رف التجفيف رف التجفيف	rr	
رد حصيت وضع الملابس في الجفف بشكل سليم	۲۳	
بدء الاستخدام	۲۳	
F		
تنظيف حاوية المصفاة	٢٤	العناية والتنظيف
تنظيف المكثف	٢٤	
- لوحة التحكم	٢٤	7
الجُفف الدوار	٢٤) Z
مجفف دوار صلب لا يصدأ	٢٤	
الأسطح الخارجية للمجفف	٢٤	
ضخ الماء المتكثف	٢۵	
تنظيف حاوية المصفاة	٢۵	
- تنظيف مجمع المكثف	51	
C		
تلميحات خاصة حول الغسيل	۲۷	تلميحات خاصة حول الغسيل
		r W
		/ *
خَقَقَ مما يلي إذا كان الجُفف	۲A	
حقق تما يتي إدا كان اجفف رموز المعلومات	۳.	استكشاف المشاكل وحلها
رمور التعلومات	, .	E A
		T \(\)
جدول العناية بالأقمشة	۱۳۱	الملحق
حماية البيئة	۳٢	AUI A
بيان التوافق	۳٢	٣1
المواصفات	۳٢	7 7
جدول الدورات	٣٣	
بيانات الاستهلاك	٣٤	

٨_ الحتويات

تركيب الجفف


الأدوات اللازمة للتركيب

استعن بفني محترف لتركيب هذا الجُفف بشكل صحيح. في حالة إجراء اتصال بمركز صيانة بسبب سوء التركيب أو الضبط أو التوصيل. يتحمل الفنى الذي قام بتركيب المنتج السئولية. أما إذا قمت بتركيب الجُفف بنفسك. فستتحمل تلك المسئولية.

تأكد ّمن توفر كافة المستلزمات الضرورية للتركيب بشكل صحيح (جهد تيار متردد ٢١٠~٢٤٠ فولت وتردد ٥٠ هرتز وشدة تيار).

- ا. يجب توفر مخرج تيار كهربي متصل بأرضي. قم بالاطلاع على "المتطلبات الكهربية" (راجع صفحة ١١).
- نظام تكثيف يقوم بتكثيف الهواء وتوليده بالإضافة إلى توزيع الهواء الساخن والرطب داخليًا باستخدام مكثف حرارة داخلي.

نظرة حول السطح الخارجي للمجفف

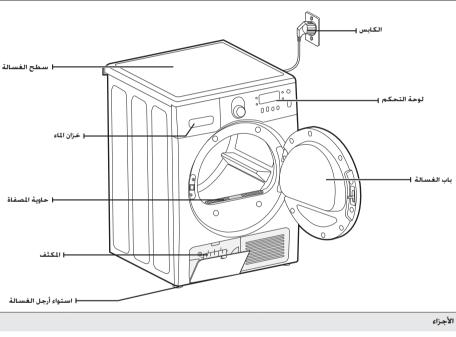



تركيب الجفف __٩

تركيب الجفف

الفحص قبل التركيب

- لا تقم بتوصيل سلك التيار الكهربي بمقبس الحائط قبل اكتمال تركيب الجفف.
- افحص المظهر الخارجي للمنتج للتحقق من أي أجزاء تالفة قبل البدء في تركيب المنتج.
- في حالة وجود أي أجزاء تالفة. الرجاء الاتصال بأقرب "مركز خدمة عملاء" لشركة Samsung.
 - عند نقل المنتج. لا تقم بنقله بنفسك.
 - يجب توخي الحذر لأن حواف الجفف قد تكون حادة.
 - لا تقم بتركيب الجفف في مكان معرض للتجمد. قد يتسبب الماء البارد في تلف المنتج.
 - استخدم المنتج في المنزل فقط.
- لا تقم بوضع الجفف على إحدى جانبيه عند حمله. ولا تقم بنقله بطريقه تسبب اهتزاز للأجزاء الداخلية. قد ينتج عن هذا الأمر تلف الأجزاء الداخلية للمنتج.

إجراءات ما قبل استخدام المنتج

- خقق من وجود أي ملحقات متبقية داخل الحاوية.
- قم بتوصيل سلك التيار الكهربي قبل تشغيل المنتج.
- لا تغلق فتحة مدخل الهواء الخاصة بشبكة التبريد الموجود على اللوحة الأمامية للمجفف.
- لا تضع أشياء قابلة للاشتعال بالقرب من الجفف وحافظ دائمًا على نظافة الأشياء الحيطة.
 - اجعل مستوى الجفف مساويًا للأرض.
- لا تنزع أرجل الجفف القابلة للضبط, نظرًا لأنها ضرورية للحفاظ على مستوى المنتج في نفس مستوى الأرض.

تعليمات هامة للتركيب

الرجاء قراءة الإرشادات التالية بعناية قبل تركيب الجفف. يجب الخفاظ على هذه الإرشادات للرجوع إليها في المستقبل.

🚹 قم بإزالة الأبواب من جميع الأجهزة المهملة لتجنب خطر تعرض الأطفال للاختناق.

الاعتبارات المكانية

لا يتطلب الأمر وجود جهاز تهويه خارجي نظرًا لاختيار نوع مكثف يقوم بتكثيف الهواء وتوزيعه داخل الجفف

لذلك يمكن تركيب الجفف واستخدامه في أي مكان تكون فيه درجة الحرارة بين ٥ و ٣٥ درجة مئوية. بخلاف الجفف التقليدي الذي يتطلب نظام خارجي للتخلص من العوادم.

تركيب القنطرة أو الخزانة

لتشغيل الجفف بشكل آمن وسليم. يجب توفير الحد الأدنى من الفراغات حولها كما يلى:

الجزء الخلفي - ٥١ م الجوانب - ٢٥ م

الجزء العلوي -١٥ مم الجزء الأمامي - ٤٦٥ مم

في حالة تركيب الغسالة والجفف معًا. يجب أن يحتوي الجزء الأمامي للقنطرة أو الخزانة على فتحة هواء غير مسدودة ٤٦٥ م على الأقل.

١٠ ــ تركيب الجفف

المتطلبات الكهربية



🎉 المتطلبات الكهربية هي جهد تيار متردد ۲۱۰-۲۶۰ فولت وتردد ۵۰ هرتز وشدة تيار.



- قد يؤدي التوصيل غير الصحيح للموصل الأرضي للجهاز إلى خطورة حدوث صدمة كهربية. استعن بفني كهرباء متخصص أو فني صيانة إذا كان لديك شك حول توصيل الأرضي للمجفف بطريقة صحيحة. لا تقم بتعديل القابس المتوفر مع الجُفف - وإذا كان لا يتلاءم مع مخرج التيار. يفضل تركيب مخرج تيار مناسب بواسطة فني متخصص.
 - لتفادي خطر نشوب حريق أو التعرض لصدمة كهربية أو حدوث إصابات شخصية غير ضرورية. يجب أن تتم عملية توصيل الأسلاك والتوصيل بالأرضي وفقًا للقواعد الحلية. وفي حالة عدم توفر القواعد الحلية، فإن الأمريقع على عاتقك لتقوم بتوفير الخدمات الكهربية الملائمة للمجفف.

التوصيل بالأرضى

يجب أن يتم توصيل الجفف بالأرضي. وفي حالة حدوث خلل أو تعطل في الأداء, يعمل التوصيل بالأرضي على تقليل خطورة التعرض لصدمة كهربية. وذلك بتوفير مسار أقل مقاومة للتيار الكهربي.

يتم تزويد الغسالة بقابس تيار كهربي أرضي بثلاثة سنون لاستخدامه بشكل صحيح في الخرج الأرضي الُركب بشكل صحيح.



🎉 لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي إلى حدوث صدمة كهربية. استشر فني كهرباء متخصص أو فني صيانة إذا كنت غير متأكد من صحة التوصيل الأرضي للمجفف. يُحظر تعديل القابس المرفق مع الجُفف. وفي حالة عدم توافقه مع مخرَج التيار. استعن بفني كهرباء متخصص لتركيب مخرَج مناسب.

🚹 قد يتسبب عدم توصيل الجفف بالأرضي إلى خطورة نشوب حريق أو صدمة كهربائية.


تركيب الجفف __11


تركيب الجفف

التركيب جانب بجانب

للتركيب الصحيح، نوصيك بالاستعانة بفني تركيب محترف. للتركيب:

- قم بنقل الجفف إلى مكان مناسب للتركيب. يجب مراعاة تركيب الجفف والغسالة جنبًا إلى جنب.
 قم بوضع قطعتين من أسطح الكرتون الماصة للصدمات فوق الأرض. قم برفع الجفف على إحدى جوانبه لنتمكن من وضعه فوق الأسطح الماصة للصدمات.
 - أ. اجعل خلفية المجفف في وضع رأسي.
 - ". يجب أن يكون الجفف مستوي. للتأكد من توفير الجفف أداء مثالي للتجفيف. لتقليل الاهتزاز أو الضوضاء أو الحركة غير المرغوب فيها. يجب أن يكون سطح الأرض ثابت ومستو بشكل كامل.

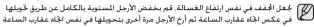

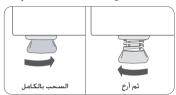



استواء ارجل العسانة

قم بضبط الأرجل للستوية كما يلزم فقط لتكون في نفس مستوى الجُفف. مع الأخذ في الاعتبار أن إطالة الأرجل للستوية أكثر من اللازم قد يتسبب في اهتزاز الجُفف.

- راجع جزء "المتطلبات الكهربية" (راجع صفحة ١١).
 قبل التشغيل أو الاختبار.
- النسبة للمستوى، خقق من الجفف وقم بإجراء التعديلات الضرورية للأرجل المستوية.
- قم بتوصيل قابس الجفف بالكهرباء. وخفق من التشغيل باستخدام قائمة الاختيار أدناه.

قائمة اختيار التركيب النهائية

- □ تم توصيل المجفف بمخرج كهرباء وتم توصيل بالأرضى بشكل صحيح.
 - تم ضبط مستوى الجفف ووضعه بشكل ثابت على الأرض.
- □ تم بدء تشغيل الجفف للتأكد من أنه يعمل ويقوم بالتسخين ويمكن إيقاف تشغيله.

تصريف الماء بدون استخدام خزان الماء


مكنك استخدام الجفف بدون استخدام خزان الماء باتباع الإجراءات أدناه.

توصيل خرطوم التصريف


يكن للمجفف ضخ الماء للكثف مباشرة خارج DRYER (الجفف) باستخدام خرطوم التصريف المتوفر. الإجراءات لتوصيل خرطوم التصريف كالتالي.



١ افصل خرطوم التصريف أ .

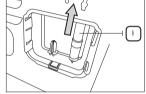

أ. قم بتوصيل خرطوم التصريف أ بالفتحة الأخرى.

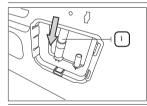

- ٣. قم بتوصيل الخرطوم الملحق(خرطوم التصريف الطويل) 🕝 بالفتحة الجاورة
 - للفتحة المتصلة بخرطوم التصريف (أ).

من خلال مخرج تصريف المغسلة.




تركيب الجفف

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

ا. فوق حافة حوض الغسيل: يجب وضع خرطوم التصريف في مستوى أقل من ٩٠سم، إذا كانت هناك حاجة إلى رفع نهاية خرطوم التصريف فوق الأرض. فإننا نوصي أن يكون ارتفاع خرطوم التصريف ما بين ١٠سم ~ ٩٠سم. للحفاظ على فتحة خرطوم التصريف منثنية. استخدم حامل الخرطوم البلاستيكي المرفق. ثبت الحامل على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك لمنع سقوط خرطوم التصريف من الحركة.

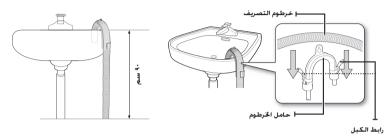


- اً. قم بتجميع خرطوم التصريف وحامل الخرطوم و قم بتثبيتهم بواسطة رابط كبل.
- ٣. يكنك تصريف الماء المتكثف عن طريق توصيل الخرطوم الملحق (خرطوم التصريف الطويل) إلى مخرج التصريف مباشرة.

توصيل خرطوم التصريف

يمكن تصريف الماء المتكثف الذي يخرج أثناء التجفيف على الفور عن طريق توصل خرطوم التصريف بالصنبور.

قم بتجميع موصل الخرطوم والخرطوم معًا.

فد يوجد خطر تسرب الماء من موصل الخرطوم والخرطوم الملحق. لذلكُ يرجى التأكد من توصيلهم بإحكام.

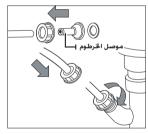


قم بتوصيل نهاية الخرطوم بالصنبور.




11_ تركيب الجفف


تثبيت التركيب

قم بوضع الجفف بحرص على جانبه. استخدم مواد التعبئة حتى لا تخدش الشكل
 النهائي للمجفف.

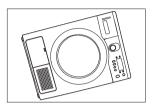

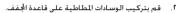


- قم بوضع أربع وسادات مطاطية في حزمة الأجزاء. قم بإدخال الوسادات المطاطية إلى داخل الفتحات الموجودة أسفل الأرجل المستوية.
 - قم بشراء حزمة أدوات الرص بشكل منفصل.

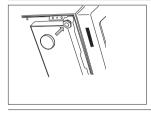

٣. اجعل الجفف عموديًا.

🚣 يمكن تركيب طقم التجميع مع عائلة منتجات Samsung فقط.

- قم بتركيب مسند التحميل في الجفف.
- أزل مسمار الغطاء العلوي للغسالة من الخلف ناحية اليسار. قم بمحاذاة فتحات مسند التحميل اليسري مع فتحة مسمار الغطاء العلوي الموجودة في الجزء الخلفي للوحدة ناحية اليسار وقم بتبديل المسمار.
 - اجعل المسار غير محكم حتى يسهل محاذاة فتحة الجفف. • كرر الخطوة السابقة على الجانب الأمن.

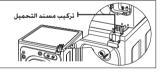

قم بتركيب الجفف ومسند التحميل على الغسالة

- قم برفع الجُفف أعلى الغسالة. قم بحماية لوحة خكم الغسالة باستخدام ورق
 كرتون أو أي وسيلة حماية أخرى. تأكد من رفع الجفف إلى أعلى بصورة كافية لتنظيف
 لوحة خُكم الغسالة.
 - إصابة شخصية. يُوصى برفع الجُفف بواسطة أكثر من شخصين إلى الكان الناسب بسبب كبر حجمه وثقل وزنه. قد يؤدي عدم الالتزام بهذه التعليمات إلى إصابة جسدية.
 - قم بحاذاة الفتحات في مسند التحميل مع الفتحات في اللوحة الخلفية للمجفف باستخدام مفك فيليبس. وقم بربط مسامير M4 x 12.
 - احكم مسامير مسند خميل الغسالة: وبعد ذلك احكم كافة مسامير أدوات الرص.



أنهاء عملية التركيب

- راجع إرشادات تركيب الغسالة لاستكمال تركيب الغسالة.
 - · راجع إرشادات تركيب الجفف لاستكمال تركيب الجفف.
- حرك أو أزح الغسالة والجُفف المتراصين إلى مكانهما بحرص شديد. استخدم وسادات ناعمة أو أي أداة انزلاق للمساعدة في التحريك و حماية الأرضية.
 لا تدفع الجُفف بجرد تم تركيبه أعلى الغسالة. فقد يؤدي دفع الجُفف إلى حشر الأصابع.



تركيب الجفف

عكس الباب

مكنك تغير اجماه فتح الباب وفقًا لمتطلباتك (مكان التركيب، قيود الفراغ).


يتم ذلك وفقًا لاحتياجات العميل. يمكن للفني المتخصص أو العميل القيام بذلك بنفسه مباشرة.



- قم بفصل سلك الطاقة.
- قم بفك المسمارين من مفصلة الباب.
 - ٣. ارفع الباب لفصله.



قم بفك السنة عشر مسمارًا.

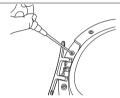


- ا. بعد فك المسمان قم بلف الماسك الزجاجي والباب الزجاجي وغطاء الباب (ا) بمقدار ۱۸۰
 درجة كما هو موضح بالشكل.
 - 🚹 حيث أن الماسك الزجاجي والباب الزجاجي وغطاء الباب (ا) غير مثبتين بشكل كامل.
 - ··· قم بندويرهم قابضًا على الجزء السفلي لكي لا ينفصلوا.
 - افعل ذلك بحرص حتى لا يتم نزع غطاء الباب.



بعد تدويرهم ۱۸۰ درجة. قم بالإمساك بهم كما هو الموضح بالشكل.




 ٧. قم بتجميع الماسك الزجاجي في الانجاء الصحيح. (بعد الفك. قم بتجميعهم بتدويرهم مقدار ١٨٠ درجة).

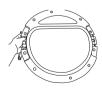

١٦ _ تركيب الجفف

- ٨. قم بربط الستة عشر مسماراً في المكان الصحيح.
- ٩. لاحظ أن اثنين من المسامير لديهم أطوال مختلفة عن البقية. (استخدم المسامرين الأطول لرافعة الباب).

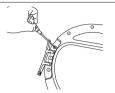

١٠. قم بتحريك مكان المسمار الموجود خلف مفصلة الباب.




قم بربط المسمار في أسفل الفتحة.




- ١١. قم بفك المسمارين المستخدمين في تثبيت الإطار الأمامي الموجود على اليسار.
- ١٣. قم بفك المسمارين المستخدمين فيّ تثبيت رافعة الحامل الموجودة على اليسار.



14. الآن. انتقل إلى الجانب الأيمن من المنتج وقم بربط المسمارين المستخدمين في تثبيت الإطار الأمامي والمسمارين المستخدمين في تثبيت رافعة الحامل.

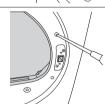

- 14. قم بمحاذاة الباب مع فتحات التثبيت.
- 11. قم بربط المسمارين المستخدمين في تثبيت مفصلة الباب.

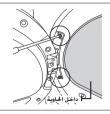


📈 عند الضرورة. يمكنك إعادة الجاه فتح الباب من خلال اتباع الإجراءات السابقة.



تركيب الجفف __١٧

إرشادات التشعيل، تلميحات

نظرة عامة على لوحة التحكم

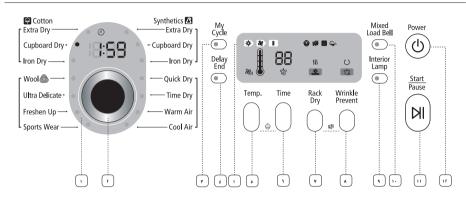

شاشة العرض الرسمية الرقمية

Cycle Selector

(قرص خديد الدورة)

تعرض الوقت المتبقى في دورة التجفيف وكافة المعلومات الخاصة بالدورة بالإضافة إلى رسائل الخطأ.

لتحديد إحدى الدورات. قم بندوير Cycle Selector (فرص تحديد الدورة) حتى تصل إلى الدورة المطلوبة. [Cottons] (لللابس القطنية)] Cupboard Dry (جُفيف خزانة) → Extra Dry (جُفيف فائق) → Synthetics] (جُفيف فائق) → Synthetics (ملابس الألياف الصناعية)] Extra Dry (جُفيف فائق) → Time Dry (جُفيف خزانة) → Time Dry (جُفيف محريع) → Cool Air (مداة التجفيف) → Warm Air (هواء دافئ) ← Cool Air (ساضية)

Freshen Up (الإنعاش) ← Ultra Delicate (نعومة فائقة) ← Wool (صوف)

[Cottons (الملابس القطنية)] Ind (الكي) → Cupboard Dry (جُفيف خزانة) Cotton (الملابس القطنية) - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان وما إلى ذلك.

- يمبس الداخلية والماسحة والطهنطان وما إلى دنت. Extra Dry (جُفيف فائق) - استخدم هذه الدورة لتجفيف المنسوجات الصوفية أو الملابس التي ينبغي أن تكون جافة بشكل فائق مثل الجينز أو المناشف.
- Cupboard Dry (جُفيف خزانة) استخدم هذه الدورة لتجفيف أحمال الغسيل مثل الملابس القطنية
 - والداخلية والشراشف (لا تكون هذه الدورة مناسبة للجينز). Iron (الكي) - تنهى هذه المرحلة دورة التجفيف في حالة رطبة تلاءم مرحلة الكي.
- Synthetics (**ملاّبس الألياف الصّناعية**) لغسل البلوزّات أو المّعصان متوسّطة أو خفيفة الاتساخ وغيرها من الملابس الصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنايلون) أو الأنسجة الصناعية الأخرى.
- Extra Dry (جَفيف فائق) استخدم هذه الدورة لتجفيف المنسوجات الصوفية أو الملابس التي ينبغي أن تكون جافة بشكل فائق مثل الجينز أو الناشف.
- Cupboard Dry (جُفيف خزانة) استخدم هذه الدورة لتجفيف أحمال الغسيل مثل القمصان والبلوزات
 وأغطية السرير ومفارش المائدة. (لا تكون هذه الدورة مناسبة للجينز).
 - Iron (الكي) تنهي هذه المرحلة دورة التجفيف في حالة رطبة تلاءم مرحلة الكي.

Quick Dry (**جُفيف سريع**) - توفر هذه الدورة فترة جُفيف تستمر لـ ٢٩ دقيقة ويتم خَديد مستوى درجة الحرارة بشكل تلقائى.

Time Dry (م**دة التجفيف)** - تتيح لك الدورة Time Dry (مدة التجفيف) څديد الوقت المراد للدورة ومستوى درجة الحرارة في نفس الوقت.

قم بتدوير قرص خُديد الدورة إلى الخيار Time Dry (مدة التجفيف). ثم اضغط على الزر Time (الوقت) لتعيين مدة التجفيف. اضغط على الزر Time (الوقت) بشكل متكرر للمرور عبر إعدادات الوقت. ويزداد الوقت بمعدل ١٠ دقائق ليصل إلى ٩٠ دقيقة.

Cool Air (هواء بارد) - تكون هذه الدورة مناسبة لجميع الأقمشة التي ختاج إلى تدوير منعش دون تسخين.

١٨ __ إرشادات التشغيل، تلميحات

Wool (صوف) - تكون هذه الدورة مناسبة فقط للملابس الصوفية التي يمكن غسلها آليًا ويمكن جُفيفها عن طريق دورات التجفيف. ينبغى أن يكون وزن الغسيل أقل من كيلو جرام واحد. وقد تم اعتماد الدورة Wool (صوف) من قبل شركة Woolmark للعناية الكاملة بالمنتجات الصوفية. WOOLMARK APPAREL CARE ا برقم M1006 (رقم اعتماد شركة Woolmark). كا طرازات Wool mark المتوفرة: SDC1A809 Ultra Delicate (نعومة فائقة) - صُممت الدورة Ultra Delicate للملابس الداخلية وتكون درجة الحرارة Freshen Up (هواء منعش) - مع هذه الدورة مكن التخلص من الروائح وإنعاش الثياب. Sports Wear (اللابس الرياضية) - استخدم هذه الدورة مع الملابس المقاومة للماء (باستثناء Gore-Tax) للحفاظ على مظهرها وملمسها. للحصول على أفضل نتائج لعملية التجفيف. اقلب الملابس على ظهرها قبل جُفيفها. قد لا يؤدي التحميل الزائد للمجفف إلى الخصول على النتائج نفسها. لمعرفة "الحد الأقصى للتحميل" في كل دورة. راجع "جدول الدورات" الموجود باللحق. مكنك اختيار دورة التجفيف المفضلة بما في ذلك الدورة ودرجة الحرارة وخيار مستوى "التجفيف" وما إلى ذلك. زر التحديد My Cycle (الدورة المفضلة) (راجع الصفحة ١١ لمزيد من التفاصيل.) اضغط على هذا الزربشكل متكرر للاختيار من بين خيارات الزر Delay End (تأجيل التوقف) المتوفرة زر التحديد Delay End (من ٤ ساعات وحتى ١٩ ساعة بزيادة ساعة واحدة). ٤ (تأجيل التوقف) تشير الساعة المعروضة إلى وقت انتهاء دورة التجفيف. زر التحديد .Temp اضغط على هذا الزربشكل متكرر للتبديل بين خيارات مستوى درجة حرارة التجفيف المتوفرة. (درجة الحرارة) عند استخدام دورات "التجفيف اليدوي". مكن ضبط الوقت عن طريق الضغط على زر التحديد زر التحديد Time ١٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ١٠ دقيقة ← ٧٠ دقيقة ← ٨٠ دقيقة ← ٩٠ دقيقة (الوقت) عند استخدام الدورة Sensory Dry (جَفيف حساس). يتوقف مؤشر الوقت الخاص بدورة التجفيف اليدوية لأنه يتم خديد مدد التجفيف الدقيقة حسب مستويات الرطوبة المتغيرة. يكون الزر Rack Dry (رف التجفيف) متوفرًا فقط أثناء دورة مدة التجفيف. ويتم في هذه الحالة تعيين درجة زر التحديد Rack Dry (رف التجفيف) الحرارة إلى Low (منخفضة) فقط. (راجع صفحة ١٦ لمزيد من التفاصيل.) يوفر الوضع Wrinkle Prevent (مانع التجعيد) ١٠ دقيقة تقريبًا من التدوير المتقطع في هواء بدون الحرارة في نهاية الدورة لتقليل جُعيد الأقمشة. اضغط على الزر Wrinkle Prevent (مانع التجعيد) لتنشيط هذه الميزة. زر التحديد سيضيء المؤشر الموجود فوق اللوحة عند تحديد الوضع Wrinkle Prevent (مانع التجعيد). ويعمل هذا الوضع Wrinkle Prevent على عدم تعرض الغسيل الجفف للتجعيد بسبب الدوران المتكرر للحاوية بعد اكتمال دورة التجفيف. (مانع التجعيد) (حتى بعد ظهور الرسالة "End"، ستدور الحاوية على فترات متقطعة.) يعمل على إضاءة حاوية الجفف أثناء تشغيله. زر التحديد Interior Lamp (المصباح الداخلي) ويمكن ضبطه أثناء تشغيل الجفف أو إيقاف تشغيله. وفي حالة عدم إيقاف تشغيل "مصباح الحاوية" خلال ٤ دقائق من تشغيله، يتم إيقاف تشغيله تلقائيًا. ينتج عن هذا الزر إنذار لتنبيه المستخدم عندما يصل مستوى التجفيف المتوسط إلى التجفيف الرطب زر التحديد (التجفيف بنسبة ٨٠٪) ويتضمن الغسيل أنواعًا مختلفة من الملابس والأقمشة. Mixed Load Bell 1. وعند الوصول إلى درجة التجفيف المطلوبة, يومض المصباح المشع للضوء الخاص بجرس الحمولة المتنوعة. (جرس الحمولة المتنوعة) اضغط على هذا الزر لبدء دورة التجفيف. فإذا كان الجفف قيد التشغيل. اضغط عليه مرة واحدة لإيقاف زر التحديد Start/Pause الجفف مؤقتًا. واضغط على الزر مرة أخرى لإعادة تشغيل دورة التجفيف. (تشغيل/إيقاف مؤقت) اضغط على هذا الزر لتشغيل الجفف واضغط عليه مرة أخرى لإيقاف تشغيله. في حالة عدم الضغط على ۱۲ الزر Power (تشغیل) أى من أزرار الجفف لمدة تزيد عن ١٠ دقائق أثناء تشغيله. يتم إيقاف تشغيله تلقائيًا.

إرشادات التشغيل، تلميحات __14


إرشادات التشغيل، تلميحات

التأمين ضد عبث الأطفال


وهي عبارة عن وظيفة لمنع الأطفال من العبث بالجفف.

التنشيط/إلغاء التنشيط

إذا كنت ترغب في تنشيط أو إلغاء تنشيط Child Lock (التأمين ضد عبث الأطفال). اضغط على كلا الزرين .Temp (درجة الحرارة) و Time (الوقت) في نفس الوقت لمدة ثلاث ثمار.

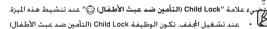

- . مجرد ضبط الوظيفة Child Lock (التأمين ضد عبث الأطفال), فلن يستجيب أي زر باستثناء الزر Power (تشغيل) حتى يتم إلغاء تنشيط الوظيفة Child Lock (التأمين ضد عبث الأطفال).
 - في حالة تشغيل الجفف مرة أخرى. تظل الوظيفة Child Lock (التأمين ضد عبث الأطفال) فيد التشغيل.
 - في حالة عدم استجابة الأزرار الأخرى. باستثناء الزر Power (تشغيل).
 حقق من تشغيل مؤشر (Child Lock) (التأمين ضد عبث الأطفال)
 لمعرفة ما إذا كانت هذه الوظيفة قيد التشغيل.

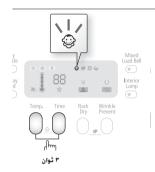


إيقاف التنبيه

يكن خُديد الوظيفة Signal Off (إيقاف التنبيه) خلال كافة الدورات. وعند خَديد هذه الوظيفة. بتم إيقاف تشغيل تنبيه الصوت لكافة الدورات. حتى فى حالة تشغيل الجهاز أو إيقاف تشغيله بشكل متكرر لا يتغير الإعداد الذي تم اختياره.

التنشيط/إلغاء التنشيط

إذا كنت تريد تشغيل الوظيفة Signal off (إيقاف التنبيه). اضغط على الزرين Rack Dry (رف التجفيف) و Wrinkle Prevent (مانع التجعيد) في نفس الوقت لمدة ٣ ثوان.

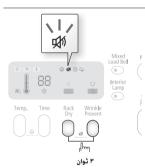

٢٠ _ إرشادات التشغيل، تلميحات

الدورة المفضلة

تتيح لك هذه الوظيفة تنشيط الدورة الخصصة والتي تتضمن خيارات جودة التجفيف ودرجة حرارة التجفيف ومدة التشغيل. بالضغط على الزر My cycle (ا**لدورة المُضَلة**), يتم تنشيط الإعدادات للستخدمة أثناء الوضع السابق My cycle (الدورة المُضلة).

Default (افتراضي) : Normal Cycle (دورة عادية))

في حالة تنشيط الوضع My cycle (الدورة المفضلة). يضئ مؤشر My cycle (الدورة المفضلة).


يمكنك تعيين كافة الخيارات في الوضع My Cycle (الدورة المفضلة) كالتالي.

- ا. حدد الدورة باستخدام Cycle Selector (قرص مخديد الدورة).
 - بعد الانتهاء من تحديد الدورة. قم بضبط كل خيار تريده.



٣. بعد ذلك. يكنك بدء تشغيل الوظيفة My Cycle (الدورة الفضلة) عن طريق الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) في الوضع
 ٣. المضلة). يتم عرض الدورة والخيارات التي قمت بتحديدها في المرة القادمة التي تختار فيها الوظيفة My Cycle (الدورة المفضلة).

ويتم عرض الإعداد الأخير الذي قمت باستخدامه في المرة القادمة التي تختار فيها الوظيفة My Cycle (الدورة المفضلة).

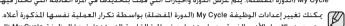

تأجيل التوقف

يكنك ضبط الجُعف لإنهاء دورة التجفيف بشكل تلقائي في وقت لاحق قم باختيار تأجيل الوقت من ٤ ساعات وحتى ١٩ ساعة (بزيادة ساعة واحدة). تشير الساعة العروضة إلى الوقت الذي سيتم فيه إنهاء دورة التجفيف.

- مكنك ضبط الجفف تلقائيًا أو يدويًا حسب نوع الملابس التي ترغب في جَفيفها.
- اضغط على الزر Delay End (تأجيل التوقف) بشكل متكرر حتى يتم تعيين وقت التأجيل المطلوب. في حالة تعيين وقت التأجيل. يتم "تشغيل" الوظيفة Delay End (تأجيل التوقف).
- اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). سيومض المؤشر "Delay End" (تأجيل التوقف) (3" وستبدأ الساعة بالعد التنازلي حتى انتهاء الوقت الحدد.
 - :. لإلغاء الوظيفة Delay End (تأجيل التوقف). اضغط على الزر Power (تشغيل) ثم قم بتشغيل الجفف من جديد.

المصباح الداخلي

يعمل على إضاءة حاوية الجفف أثناء تشغيله.

(الضبط & إلغاء التنشيط) Setting & releasing

إذا كنت تريد ضبط Interior Lamp (المصباح الداخلي) أو إلغاء تنشيطه، اضغط على زري Interior Lamp (المصباح الداخلي) معًا.

ي بكن القيام بهذا الإجراء بجرد توصيل سلك التيار الكهربي بقبس الحائط. وفي حالة عدم إيقاف تشغيل "مصباح الحاوية" كما خلال د وفائق من تشغيله. يتم إيقاف تشغيله تلفائيًا.

إرشادات التشغيل، تلميحات ___ ٢١


إرشادات التشغيل، تلميحات

رف التجفيف

تركيب رف التجفيف

- افتح باب الجفف.
- ركب رف التجفيف داخل الحاوية. بوضع الحافة الأمامية لرف التجفيف فوق علية مصفاة النسالات.
- ضع الأرجل الخلفية في الأجزاء الجوفة بالجهة الخلفية للمجفف ثم اضغط لأسفل على رف التجفيف من المنتصف لتثبيته.
 - ضع العناصر التي تريد جُفيفها على الرف, تاركًا مسافة بينها حتى يتخللها الهواء.
 - أغلق باب الجفف.
 - اضغط على الزر Power (تشغيل).
 - حدد Time Dry (مدة التجفيف) باستخدام قرص اختيار الدورة. عين الوقت ثم اضغط على الزر Rack Dry (رف التجفيف).
- رس حيار سووت بم اصعط على انزر Hack ury (ه التجفيف).

 يمكنك تعيين مدة التجفيف لفترة تصل إلى ٩٠ دقيقة. ويتم تعيين إعداد درجة الحرارة تلقائبًا إلى Low (منخفضة) ولا يمكن تون ما حدد المقدمة تغييرها. حدد الوقت على حسب رطوبة العناصر ووزنها. شغل الجفف. قد تكون هناك ضرورة إلى إعادة تعيين المؤقت إذا تطلب الأمر وقت جَفيف أطول.
 - في حالة عدم تحديد الدورة Time Dry (مدة التجفيف). لا يتم تحديد وظيفة Rack Dry (رف التجفيف).
 - اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

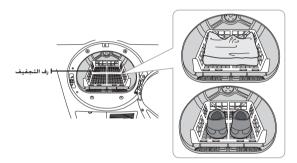

العناصر المقترحة	ملاحظات (الحد الأقصى٥. اكجم)	
السترات القابلة للغسل (طبق هذه السترات إلى أشكال وضعها بشكل مستوعلى الرف)		
الدمي الحشوة (الحشوة بالقطن أو ألياف البوليستر)	عند جُفيف الغسيل باستخدام "الرف". قم بطي الملابس ووضعها على "الرف" لتجنب الكرمشة.	
الدمي الحُشوة (الحُشوة بالألباف الهشة أو للطاط)	ووستها عنی الرف تنبیب التربست.	
الوسادات المطاطية الهشة		
الأحذية الرياضية	لتجفيف الأحذية الرياضية. فم بوضعها على "الرف" بحيث يكون نعل الحذاء لأسفل.	

🚹 قد ينتج عن تجفيف المطاط الهش أو البلاستيك أو المطاط باستخدام إعداد التسخين تلف هذه العناصر أو نشوب حريق.

🚹 قد يحدث تلف للأحذية عند جُفيفها. ومن ثم ينبغي استخدام الدورة Rack Dry (رف التجفيف) لتجفيف الأحذية.

٢١ _ إرشادات التشغيل، تلميحات

وضع الملابس في الجفف بشكل سليم

- قم بوصع حمولة غسيل واحدة في الجفف في كل مرة.
- سوف جَف الأحمال الختلطة من اللابس الثقيلة والخفيفة بطريقة مختلفة, والذي قد ينتج عنه جَفيف الملابس الخفيفة بينما تبقى الملابس
 الثقيلة رطبة في نهاية دورة التجفيف.
 - قم بإضافة قطعة أو أكثر من الملابس المتشابهة إلى المجفف عندما يتطلب الأمر جَفيف قطعة أو اثنين من الملابس فقط لأن ذلك يعمل على خسين عملية التدوير وكفاءة التجفيف.
 - تعمل الحمولة الزائدة على تقييد عملية التدوير. ما ينتج عنه بخفيف متقطع وكرمشة زائدة لبعض الملابس.
 - تأكد من أنك تقوم بإدخال الملابس التي تم جَفيفها بواسطة الغسالة المناسبة.
 - يجب عدم فخفيف المنسوجات غير المغسولة
 - يجب عدم فجفيف المنسوجات التي بها بقع من الزيت أو الكحول أو البترول أو ما إلى ذلك.

بدء الاستخدام

- ضع الملابس في الجفف بدون إفراط جنب الزيادة.
 - . أغلق الباب.
- ٣. حدد الدورة والخيارات المناسبة للحمولة (راجع الصفحات ١٠ و٢١).
 - اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
 - ا. سوف يضىء مؤشر الجفف.
 - سوف تظهر مدة التجفيف المقدرة على الشاشة.
- قد يتغير الوقت لكي يوضح بشكل أفضل مدة التجفيف المتبقية في الدورة.
 - عندما تكتمل الدورة يظهر "End" ("النهاية") على الشاشة.
- يؤدي الضغط على زر Power (الطاقة) إلى إلغاء الدورة وإيقاف الجفف.
- سيوف تضيء أضواء للؤشر الخاص بكل من Drying (التجفيف) وCooling (التبريد) وWrinkle Prevent (منع الكرمشة) أثناء إجراء هذه العمليات في الدورة.

العناية والتنظيف

تنظيف حاوية المصفاة

- بعد كل جمولة.
- لتقليل مدة التحفيف.
- للتشغيل بكفاءة أكثر في استخدام الطاقة.



💯 لا تقم بتشغيل الجفف دون أن تكون حاوية المصفاة في مكانها.



🚹 قد يكون هناك خطر تلف الغسيل عند جُفيف الملابس بدون استخدام حاوية المصفاة.

تنظيف المكثف

- قم بتنظيف المكثف مرة واحدة في الشهر
 - قم بتنظيفه بالماء



أداء التجفيف إذا لم تقم بتنظيف المكثف لمدة طويلة.

لوحة التحكم

قم بتنظيف لوحة التحكم بقطعة قماش ناعمة ورطبة. لا تستخدم المواد الكاشطة.

لا تقم برش المنظفات على اللوحة مباشرة.

قد يتلف المظهر الخارجي للوحة التحكم بواسطة بعض المنتجات سابقة المعالجة التي تستخدم لإزالة التلوث والبقع. استخدم هذه المنتجات بعيدًا تمامًا عن الجمفف وقم في الحال بإزالة أي بقع أو أثار دهان.

الجفف الدوار

قم بإزالة أي بقع مثل الكربون أو الحبر أو أصباغ الملابس (من العناصر الجديدة مثل المناشف أو الجينز) باستخدام منظف يفي بكافة الأغراض. قم بتجفيف قطع القماش أو المناشف القديمة لإزالة أي بقع زائدة أو مواد تنظيف. يمكن رؤية بعض البقع. بعد اتباع هذه الخطوات ولكن لا يمكن لهذه البقع أن تنتقل لأي حمولة قادمة.

مجفف دوار صلب لا يصدأ

لتنظيف الجفف الدوار الصلب المضاد للصدأ. استخدم قطعة قماش رطبة مع منظف خفيف وغير كاشط ويناسب الأسطح الصلبة المضادة للصدأ. قم بإزالة أثار المنظف وجفف باستخدام قطعة قماش نظيفة.

الأسطح الخارجية للمجفف

الجُفف بأكمله له مظهر خارجي لامع. قم بالتنظيف باستخدام قطعة قماش ناعمة ورطبة. لا تستخدم مواد كاشطة. قم بحماية السطح من الأشياء الحادة لأنها رما تخدش النظهر الخارجي للمجفف أو تتلفه.

لا تضع أي أشياء حادة أو ثقيلة أو حتى علبة المسحوق على الجفف. قم بحفظ هذه الأشياء في علبة تخزين منفصلة أو في القاعدة التي تم شراؤها.

٢٤ ـــ العناية والتنظيف

ضخ الماء المتكثف (١٠٠٥)

اسحب خزان الماء إلى الأمام لفصله.



عند نزع خزان الماء من المنتج. اقبض عليه بكلتا يديك نظرًا لكونه ثقيل وتوخى



- قم بإزالة الماء المتكثف من داخل خزان الماء.
- قم بإزالة الماء المتكثف من الخزان عقب كل عملية جَفيف.



قد يوجد خطر تسرب الماء إذا لم تقم بتصريف الماء بعد استخدام المنتج. لذا يرجى التأكد من تصريف الماء.



إذا قمت بتفريغ خزان الماء والضغط على زر Start (تشغيل). سيتم إيقاف تشغيل . Water Tank Full (خزان الماء الممتلئ) الموجود على لوحة LED.



افتح الباب وانزع المصفاة بسحبها إلى أعلى.



- افتح حاوية المصفاة وقم بتنظيفها.
- · افتح حاوية المصفاة بعد اكتمال عملية التجفيف.






- قم بتنظيف حاوية المصفاة في فترات التنظيف المحددة. حيث أن أداء التجفيف قد يقل وبالتالي يظهر خطر نشوب حريق إذا لم تقم بتنظيف حاوية المصفاة بعد فترة معينة من الاستخدام.
- قد يقل أداء التجفيف وبالتالي يظهر خطر نشوب حريق في حالة استخدام حاوية مصفاة مكسورة أو تالفة. وفي هذه الحالة يجب استبدال حاوية المصفاة.
 - قم بتنظيف حاوية المصفاة بعد كل عملية جُفيف.
 - إذا كان سطح المصفاة مبتلة، استخدم المصفاة بعد جَفيفها بشكل كامل. إذا قمت بتنظّيف حاوية التنظيف والضغط على زر Start (تشغيل). سيتم إيقاف تشغيل Filter (المصفاة) 📕 على لوحة

العناية والتنظيف _6


العناية والتنظيف

تنظيف مجمع المكثف

افتح غطاء حجرة المكثف.

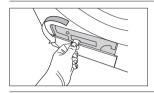

افتح المكثف المثبت.

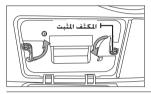

قم بإزالة المكثف.



قم بتنظيف المكثف بشكل كامل حت صنبور الماء المتدفق بحيث يتخلله الماء.



- قد يقل أداء التجفيف إذا لم تقم بتنظيف الكثف بعد مدة محددة من الاستخدام لذلك يجب عليك تنظيف المكثف خلال فترات زمنية محددة.
 - قم بتنظيف المكثف مرة واحدة شهريًا.
 - · عند جَميع المكثف بعد تنظيفه، تأكد من ضبط المكثف المثبت على وضع الغلق.

٢١_ العناية والتنظيف

تلميحات خاصة حول الغسيل

تلميحات خاصة حول الغسيل

الرجاء اتباع بطاقة العناية أو تعليمات الشركة المصنعة لتجفيف الأنواع الخاصة من الملابس إذا كانت تعليمات بطاقة العناية غير متوفرة. استخدم المعلومات التالية كدليل لك.

المعلومات العالية العاليان لت.		
أغطية السرير والأففة		اتبع تعليمات بطاقة العنابة أو قم بالتجفيف من خلال الدورة Cupboard (خزانة) الخاصة بالملابس القطنية على أن تكون درجة الحرارة هي High (عالية). تأكد من قجفيف قطعة الملابس بصورة تامة قبل الاستخدام أو التخزين. قد يتطلب الأمر تغيير وضع الملابس لضمان التجفيف المناسب.
البطانيات		استخدم الدورة Cupboard (خزانة) الخاصة بـ Cotton (الملابس القطنية) ثم قم بتجفيف بطانية واحدة فقط في كل مرة للوصول إلى أفضل إجراء للدوران. تأكد من جُفيف قطعة الملابس بصورة تامة قبل الاستخدام أو التخزين.
الحفاضات القماش	•	استخدم الإعدادين Cupboard و High لكل من الملابس القطنية ودرجة الحرارة على التوالي في حالة الحفاضات الناعمة والرقيقة.
العناصر الخفيفة التي تساعد على التدفئة (السُترات وحقائب النوم والألحفة وما إلى ذلك)	•	استخدم Cupboard (خزانة) والإعداد Low (منخفض) أو الإعداد درجة الحرارة المنخفضة. تعمل إضافة منشفتين جافتين على تقليل وقت التجفيف وامتصاص الرطوبة.
المطاط الأسفنجي (ظهر السجاجيد والدمى الحشوة ووسائد الأكتاف وما إلى ذلك)		لا تقم بالتجفيف مع إعداد الهواء الساخن. استخدم الدورة Cool Air (هواء بارد) بلا تسخين. خَذِير - قد يؤدي جُفيف أحد العناصر المصنوعة من المطاط بالهواء الساخن إلى تلفه أو خطر حودث حريق.
الوسائد	•	استخدم Cupboard (خزانة) الخاص بـ Cotton (اللابس القطنية). أضف منشفتين جافتين للمساعدة في إجراء قجفيف بالدوران ولجعل قطعة اللابس ناعمة. لا تقم بتجفيف الوسائد الحشوة بالألياف الحريرية (الكابوك) أو المواد الأسفنجية في المجفف. استخدم الدورة Cool Air (هواء بارد).
البلاستيكيات (ستائر الحمامات وأغطية الأثاث الموجود في الأماكن الخلوية وما إلى ذلك)	٠	استخدم الدورة Cool Air (هواء بارد) أو الدورة Time Dry (مدة التجفيف) والإعداد Low (منخفض) أو الإعداد Low temperature (درجة حرارة منخفضة) وذلك وفقًا لتعليمات بطاقة العناية.

أشياء يجب جّنبها:

- الأقمشة المصنوعة من الفيبرجلاس (الستائر وأغطية الأثاث الفضفاضة وما إلى ذلك)
 - الملابس الصوفية، ما لم يكن موصى بذلك في البطاقة.
 - الملابس الملوثة بالزبوت النباتية أو الطعام.

استكشاف المشاكل وحلها

خقق ما يلى إذا كان الجفف...

المشكلة	الحل
لا يعمل.	 تأكد من إغلاق الباب بإحكام. تأكد من توصيل سلك الطاقة بخرج التيار الكهربائي المباشر. افحص مفتاح قاطع الدائرة الكهربية وفواصم الكهرباء في المنزل. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) مرة أخرى في حالة فتح باب الجفف أثناء الدورة. افرغ الماء الموجود في خزان الماء المكثف. قم بتنظيف حاوية المصفاة.
لا يقوم بالتسخين.	 افحص مفتاح قاطع الدائرة الكهربية وفواصم الكهرباء في المنزل. حدد إعداد الهواء الساخن بدلاً من الإعداد Cool Air (هواء بارد). افحص مصفاة الحلة والكثف ثم قم بتنظيفهما إذا لزم الأمر. ربا يكون الجفف قد انتقل إلى مرحلة التبريد أثناء الدورة.
لا يقوم بالتجفيف.	افحص كل ما سبق. علاوة على ما يلي لا تتجاوز الوزن المحدد حمولة الغسيل = حمولة التجفيف. فرز الملابس الثقيلة عن الملابس خفيفة الوزن. فد تتطلب العناصر الكبيرة والضخمة مثل البطانيات أو الألحفة تغيير الوضع لضمان التجفيف المناسب المناطبة المناسبة المناسبة المناسبة المناطبة المناسبة المنا
يصدر صوتًا مرتفعًا.	 افحص ما إذا كانت الملابس ختوي على بعض الأشياء مثل العملات المعدنية أو الأزرار المفكوكة أو المسامير وما إلى ذلك. قم بإخراجها على الفور. تأكد من ضبط الجفف على المستوى الناسب كما هو مذكور في إرشادات التركيب. من الطبيعي أن يصدر الجفف طنينًا وذلك بسبب السرعة العالية لانتقال الهواء خلال حاوية الجفف والمروحة.
يقوم بالتجفيف بشكل غير متساوٍ.	 قد لا يتم جُفيف التجعيدات والجيوب والمناطق الصعبة المماثلة بشكل تام في حالة وصول باقي الملابس إلى مستوى التجفيف المحدد. ويكون هذا أمرًا طبيعيًا. حدد الإعداد Extra Dry (جُفيف فائق) في حالة الرغبة في ذلك. إذا تم جُفيف قطعة ملابس ثقيلة مع ملابس خفيفة الوزن. مثل منشفة مع ملاءات. فمن الممكن أن لا يتم جُفيف قطعة الملابس الثقيلة بشكل تام في حالة وصول باقي حمولة الغسيل إلى مستوى التجفيف الحدد. قم بفرز الملابس الثقيلة من الملابس خفيفة الوزن للوصول إلى أفضل نتائج لعملية التجفيف.
يصدر رائحة.	 قد تدخل الروائح النزلية الناجّة عن الطلاء والدهان والمنظفات ذات الروائح القوية وما إلى ذلك إلى المخفف مع الهواء الخيط بالغرفة. ويكون هذا أمرًا طبيعيًا طالما أن المجفف يقوم بشفط الهواء من الغرفة ويحوله إلى هواء ساخن ويسحبه من خلال الحاوية ثم يقوم بإطلاقه إلى الخارج. في حالة بقاء تلك الروائح في الهواء. قم بتهوية الغرفة قبل استخدام الجفف.
يتوقف عن التشغيل قبل جُفيف حمولة الغسيل.	 حجم الحمولة في المجفف صغير جدًا. أضف المزيد من قطع الملابس أو بعض المناشف ثم قم بإعادة تشغيل الدورة. حجم الحمولة في المجفف كبير جدًا. قم بإزالة بعض قطع الملابس ثم قم بإعادة تشغيل المجفف.

٢٨_ استكشاف المشاكل وحلها

ىل	١٤	المشكلة
تأكد من تنظيف مصفاة النسالات قبل كل استخدام. مع بعض أنواع الملابس التي ينتج عنها كمية كبيرة من النسالات, قد يكون من الضروري تنظيف حاوية المصفاة أثناء الدورة. هناك بعض الأنسجة ينتج عنها نسالات (على سبيل الثال النشفة القطنية البيضاء الغطاة بالنسالات). لذا ينبغي جَفيهها بشكل منفصل عن الملابس التي تلتقط النسالات (على سبيل المثال. زوجين من السراويل الكتان السوداء) قم بتقسيم الأحجام الكبيرة من الملابس إلى أحجام صغيرة لإجراء عملية التجفيف افحص الجيوب جيدًا قبل إجراء عملية التجفيف وقبل جَفيف الملابس.		وجود نسالات على الملابس.
يؤدي اختيار الحمولات الصغيرة التي تتكون من ١ إلى ٤ قطع ملابس إلى الحصول على أفضل نتيجة. ضع حجمًا أقل من اللابس. ضع الأنواع المتشابهة من اللابس.		لا يزال هناك بعض التجعيد في الملابس رغم تشغيل وضع مانع التجعيد.
ينبغي غسل الأنسجة التي خُتوي على روائح قوية.		تظل الروائح في الملابس بعد التنظيف.

استكشاف المشاكل وحلها

رموز المعلومات

قد يتم عرض رموز المعلومات للمساعدة في فهم ما يحدث في الجفف بصورة أفضل.

الحل	المعنى	عرض الأخطاء
قم بتنظيف حاوية المصفاة أو المكثف.	حاوية المصفاة المسدودة متوقفة عن العمل.	tE2
إذا استمرت هذه المشكلة اتصل بخدمة الدعم لتلقي المساعدة.	حاوية المحققاة المسحودة محو دقة عن العمل.	tE4
أغلق الباب ثم قم بإعادة التشغيل. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.	تشغيل الجفف ويكون الباب مفتوحًا.	dE
اتصل بالخدمة لتلقي المساعدة.	الباب غير مغلق بطريقة صحيحة.	dF
تأكد من عدم الضغط باستمرار على الزر. حاول إعادة تشغيل الدورة. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.	الزر عالق لأكثر من ٣٠ ثانية.	bE
قم بتنظيف حاوية المصفاة أو الكثف. إذا استمرت هذه المشكلة اتصل بخدمة الدعم لتلقي المساعدة.	حاوية المصفاة المسدودة متوقفة عن العمل. اختيار درجة حرارة التسخين غير صالح أثناء تشغيل الجفف.	hE
حاول إعادة تشغيل الدورة. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.	EEPROM غير موصل بشكل سليم.	Et
حاول إعادة تشغيل الدورة. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.	الحُرك لا يعمل بشكل سليم.	3E
أفرغ خزان الماء ثم قم بالتشغيل مرة أخرى. إذا استمرت هذه الشكلة اتصل بخدمة الدعم لتلقي المساعدة.	خزان الماء مثلئ بالماء. مضخة التصريف لا تعمل.	5E

٣٠_ استكشاف المشاكل وحلها

اللحق

جدول العناية بالأقمشة

توضح الرموز التالية إرشادات للعناية بالملابس. تتضمن بطاقات العناية بالملابس رموزًا للتجفيف أو التجييض أو التجفيف والكي أو التنظيف الجاف إذا لزم الأمر. ويضمن استخدام هذه الرموز التناسق بين الشركات المصنعه للملابس الحلية والمستوردة. عليك باتباع إرشادات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

بة لعملية الغسيل	رموز خذيرية لعملية الغسيل		تعليمات خاصة		دورة الغسب
عدم الغسل	¥	التجفيف على حبل الغسيل / التعليق للتجفيف		عادي	
بدون عصر	>40	التجفيف بدون فجعيد	Ш	الضغط الدائم / مقاوم التجعيد / التحكم في التجعيد	
عدم استخدام المبيضات	*	التجفيف في حالة الفرد	-	الملابس الناعمة/الرقيقة	
منوع التجفيف بالتدوير	₩	ā	إعداد الحرار	الغسل اليدوي	
بدون بخار (وهي مضافة في عملية الكي)		عالية	·	** <u>\$</u> LL1	درجة حرارة
منوع الكي	A	متوسطة	·	ساخنة	•••
لجاف	التنظيف ا	منخفضة	0	دافئة	••
التنظيف الجاف	0	أية درجة حرارة	0	باردة	•
منوع استخدام التنظيف الجاف	8	بدون حرارة / هواء			التبييض
التجفيف على حبل الغسيل / التعليق للتجفيف		بالكي أو درجة حرارة التجفيف	التجفيف بالبخار	أية مادة تبييض (إذا لزم الأمر)	
التجفيف بدون جَعيد	Ш	عالية		فقط بدون كلور (حماية الألوان) التبييض (إذا لزم الأمر)	
التجفيف في حالة الفرد	Ξ	متوسطة		دورة التجفيف بالتدوير	
		منخفضة	<u>.</u>		عادي
				الضغط الدائم / مقاوم التجعيد / التحكم في التجعيد	
				الملابس الناعمة/الرقيقة	

[•] تعبر رموز النقاط الموجودة أعلاه عن درجات حرارة الماء المناسبة لأنواع الملابس الختلفة. ويكون نطاق درجات الحرارة في حالة السخونة يتراوح ما بين ١١° - ٢٩° درجة مئوية أما في حالة البرودة تتراوح ما بين ١١° - ٢٩° درجة مئوية أما في حالة البرودة تتراوح ما بين ١١° - ٢٩° درجة مئوية أما في حالة البرودة تتراوح ما بين ١١° درجة مئوية وذلك لتنشيط مسحوق الغسيل وللحصول على عملية تنظيف فعّالة).


حماية البيئة

هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز. يرجى مراعاة القوانين الخلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر للطاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.

بيان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.

المواصفات

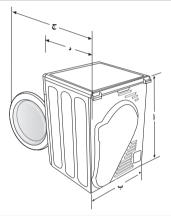

النوع		مجفف ملابس بفتحة غميل أمامية
الأبعاد	أ. الارتفاع	۸٤٫۸ سېم
	ب. العرض	۵۹٫۸ سیم
	ج. العمق على أن يكون الباب مفتوحًا مِقياس ٩٠°	١٠٨,٦ سـم
	د. العمق	۱۳٫٤ سـم
الوزن		٤٤,٥ كجم
تصنيف السخان		۲۵۰۰ واط (۱۷۵۰ واط + ۷۵۰ واط)
استهلاك الطاقة	بدون الحرارة	۱۷۵ واط
	التسخين	٢٦٧٥ واط
إضاءة الحاوية		المصباح المشع للضوء (يختلف حسب الطراز)



🎉 لاستبدال ضوء المصباح المشع للضوء, الرجاء الاتصال بخط خدمة الدعم للمساعدة.

٣٢_ الملحق

جدول الدورات

(● الاختيار للمستخدم)

وقت التبريد (بالدقائق)	إيقاف تشغيل الصوت		المصباح الداخلي	جرس الحمولة المتنوعة	الدورة المفضلة	تأجيل التوقف	الوقت	درجة الحرارة	أقصى وزن (كجم) (ملابس جافة)	ā	الدور
۵	•	•	•	•	•	•	١٣٤	عالية		جمفيف فائق	
۵	•	•	•	•	•	•	119	عالية	٨	جَفيف خزانة	الملابس القطنية
۵	•	•	•	-	•	•	99	عالية		التجفيف بالكي	
۵	•	•	•	•	•	•	۵۹	متوسطة		جَفيف فائق	
۵	•	•	•	•	•	•	٤٩	متوسطة	£	جَ فيف خزان ة	الألياف الصناعية
۵	•	•	•	-	•	•	۳۹	متوسطة		التجفيف بالكي	
1	•	•	•	-	•	•	ſV	منخفضة	1		• الصوف WOOM MARK MONIT COLL (رقم اعتماد شركا
٣	•	•	•	•	•	•	۳۵	منخفضة	1		نعومة فائقة
۵	•	•	•	-	•	•	۳٠	عالية	1,4		الإنعاش
۵	•	•	•	•	•	•	۵٠	منخفضة	1,4		ملابس رياضية
٨	•	•	•	-	•	•	19	عالية	-		جّفيف سريع
٨	•	•	•	-	•	•	٤٠	عالية	-		مدة التجفيف
۵	•	•	•	-	•	•	۲.	منخفضة	-		هـواء دافـئ)
	•	•	•	-	•	•	٢.	غير متوفر	-		هواء بارد

^{*} بناءً على نسبة الملابس الصوفية في الغسيل. قد يمتد الوقت ليصل إلى ٤٣ دقيقة.

الملحق

بيانات الاستهلاك

المدة (بالدقائق)	الطاقة (كيلو واط في الساعة)	أقصى سرعة للتجفيف في الغسالات الحُلية (لفة في الدقيقة)	الحمولة (كجم) ٠	البرنامج
119	£,£9 £,1A	۱۰۰ (۱۰ ٪ من نسبة الرطوبة المتبقية) •• ۱۱۲۰ (۵۰ ٪ من نسبة الرطوبة المتبقية)	۸	خزانة القطن
91 AV	7,91 7,55	۱۰۰۱ (۱۰٪ من نسبة الرطوبة المتبقية) ** ۱۵۰۱ (۵۰٪ من نسبة الرطوبة المتبقية)	۸	كي القطن

١. • : وزن اللابس الجافة

^{**:} برنامج الاختبار EN 61121:2005

أ. تم احتساب كافة البيانات التي تم وضع "نجمة" بجانبها باستخدام 2005 1121:2005

يكن أن تختلف بيانات الاستهلاك عن القيم الرمزية التي تم ذكرها أعلاه وفقًا لحجم الحمولة من الملابس ولأثواع المسوجات ومستويات الرطوبة المتبقية بعد التدوير وعدد مرات حدوث انقطاع للتيار الكهرس والخيارات الإضافية المحددة.

مذكرة



هل لديك أسئلة أو تعليقات؟

أو قم بزيارة موقعنا على الإنترنت على	اتصل بنا	البلد
www.samsung.com	800-SAMSUNG (726-7864)	U.A.E

رقم الكود DC68-02805J-04_AR